 


GB Installation and Operating Instructions

21.5" TFT LCD MONITOR

VMC-22LED

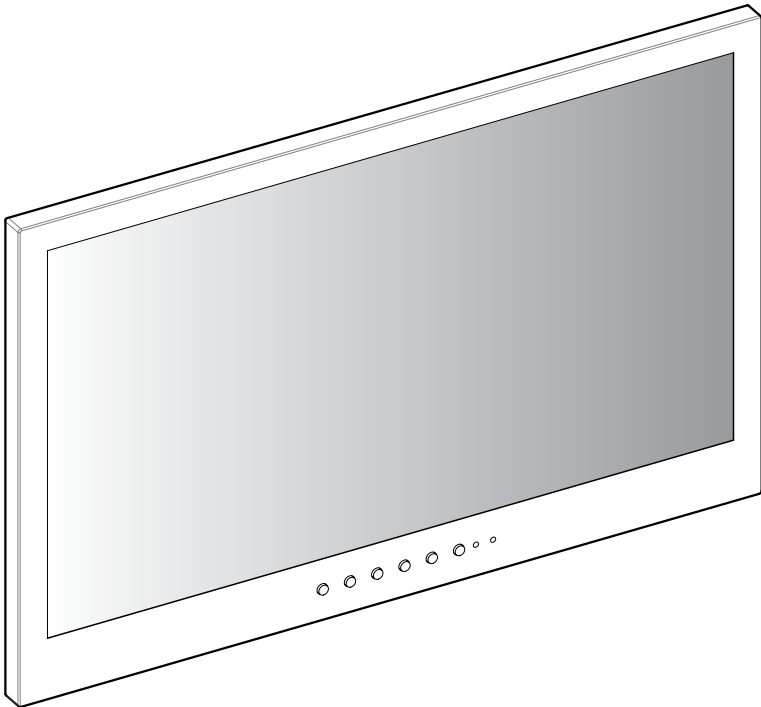

1. SAFETY INSTRUCTION

※ Follow this safety instruction to use the monitor properly and prevent the damage.

※ This safety instruction has “Warning” & “Caution” as below



Warning - If the user does not follow this instruction, it may cause the serious damage to the user.



 
Caution - If the user does not follow this instruction, it may cause the slight damage to the user or cause some damages to the monitor.

※ Keep this user's guide book for later use.




Warning

Never remove the back cover and touch the inside of the monitor. If you need a service, please contact the service center.

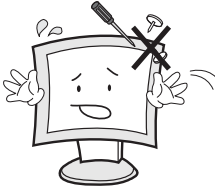

 
Keep away the monitor from the direct sunlight and a heating appliance.

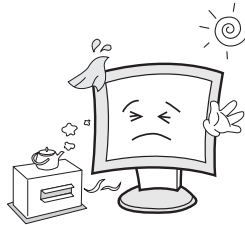

Never put objects of any kind into this product as they may result in a risk of fire or electric shock.



 Connect the power cord to the wall outlet tightly. If the power cord or plug are defective and the wall outlet is not tight, please do not use them.

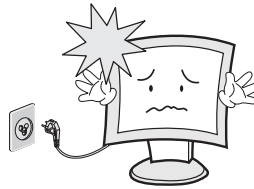


 **Warning**


Do not install this monitor on the outside and near water. It may cause damage to the product, electric shock and fire.



 
For cleaning do not use liquid cleaners. Never touch the power plug with wet-hands.

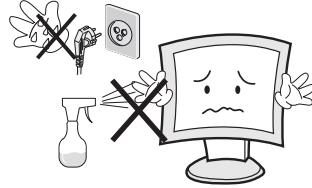

 
When lightning and thundering, unplug the monitor from the wall outlet and never touch it.

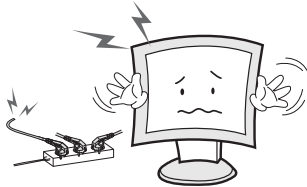

 Unplug this product from the wall outlet, when it does not operate for a long time.

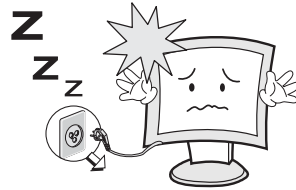

 When smoking and noising from the monitor, unplug the product from the wall outlet and contact a service center.

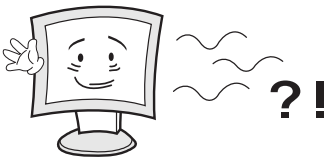

 **WARNING** : How to fix

 
Do not open this product as it contains high voltage inside.

It may create an electric shock.

If the user disassembles and remove the back cover, it does not make sure to make up for the damage and do a service and exchange the monitor.

! Cautions

Install this monitor some distance from the wall and do not install unless proper ventilation is provided.

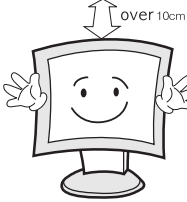

Place this product on a stable place. If not, it may fall, causing serious damages to the monitor and people.



The openings must not be blocked by curtain, rug or other similar surface.



 
When carrying this monitor, be careful not to damage the panel and drop it. It may cause some trouble.



Before carrying the monitor, turn it off and unplug the signal cables and the power cord from the wall outlet.




Take the power plug out from the wall outlet. Do not pull the cable. It may snap the inner-wires and cause overheating and fire.

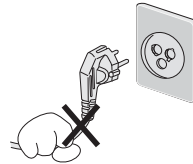

! **Cautions**

 Install this monitor about 50cm far from the eyes and an angle of 0~15 degrees below eyes. Too close installation may cause having weak sight.

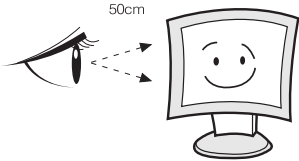

Do not press the LCD panel with hands or the sharpened material hardly.



For cleaning, unplug the monitor from the wall outlet. Do not use the liquid cloth. Use the soft cloth.



Do not use the chemical liquid for cleaning. It may cause fading and breakage.



2. FCC RF INTERFERENCE STATEMENT

NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

DOC COMPLIANCE NOTICE


This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the radio interference regulation of Canadian Department of communications.

TABLE OF CONTENTS


1. SAFETY INSTRUCTION	2
1-1 Warning	
1-2 Caution	
2. FCC STATEMENT	6
3. INSTALLATION	8
3-1 Parts	
3-2 How to Install	
4. OSD MENU SETTING	12
4-1 Mode Setting	
4-2 Menu Setting (VIDEO, S-VIDEO Mode)	
4-3 Menu Setting (VGA Mode)	
4-4 Menu Setting (DVI, HDMI Mode)	
5. FEATURES	32
6. TROUBLESHOOTING	33

3. INSTALLATION

 3-1 Parts

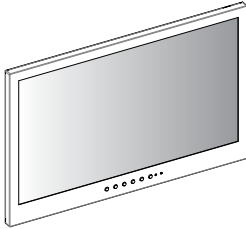


LCD Monitor

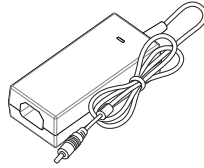 

Adapter

 
** Adapter is attached to the back of product*

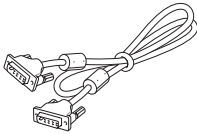

VGA Cable



 
Trigger Cable

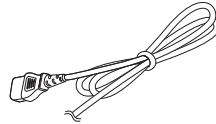


Power Cable



 Battery

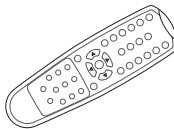


Remote Controller

 

User Manual

3-2 How to Install

 
KEY BUTTON

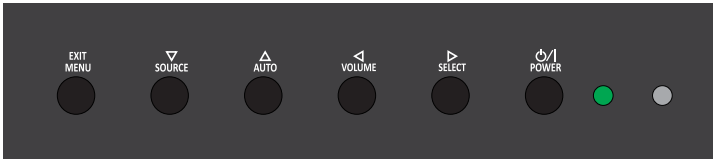

SHORT KEY FUNCTION

OSD Key	Function
EXIT MENU	Activates and exit the OSD
▽ SOURCE	Select input source, and select the OSD menu
△ AUTO	Move the OSD menu and auto adjustment of RGB source
◀ VOLUME	Decrease the level of volume and move the previous menu
▶ SELECT	Increase the level of volume and select the OSD menu
⏻ POWER	Turns the power ON or OFF. There will be a few seconds delay before the display appears. The power LED (next to the power switch) lights with green when the power is turned ON. The power is turned off by pressing the power switch again and the power LED goes red.

 CONNECTION

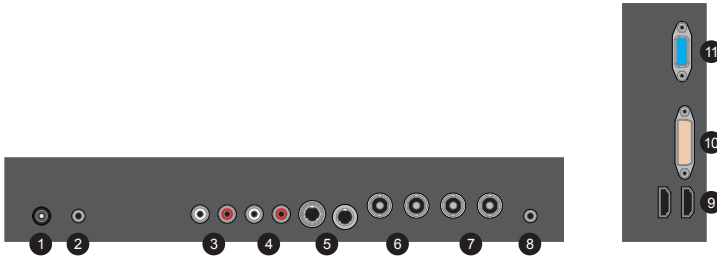

- 1** DC12V
DC adapter input

2 AUDIO (PC)
Stereo audio input for VGA

3 AUDIO (VIDEO-2)
Stereo audio input for VIDEO-2

4 AUDIO (VIDEO-1 / S-VIDEO)
Stereo audio input for VIDEO-1 or S-VIDEO

5 S-VIDEO IN / OUT
S-VIDEO signal input / looping out
- 6** VIDEO-2 IN / OUT
VIDEO-2 signal input / looping out

7 VIDEO-1 IN / OUT
VIDEO-1 signal input / looping out

 
8 TRIGGER
TRIGGER signal input

9 HDMI
HDMI signal 1 / 2 input

10 DVI
DVI signal input

11 VGA
VGA (PC RGB) signal input

REMOTE CONTROLLER

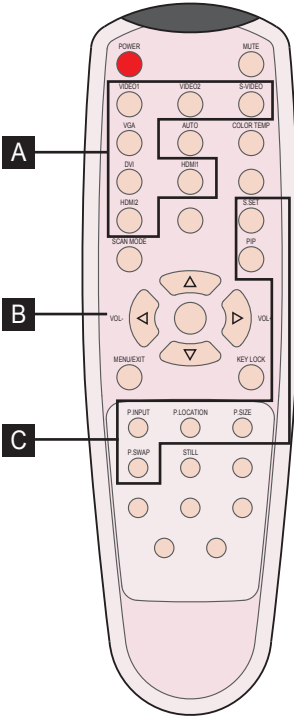

A MODE SELECT MENU

VIDEO1

Select VIDEO1 mode

VIDEO2

Select VIDEO2 mode

S-VIDEO

Select S-VIDEO mode

VGA (RGB)

Select VGA mode

DVI

Select DVI mode

HDMI1

Select HDMI1 mode

HDMI2

Select HDMI2 mode

B OSD CONTROL MENU

POWER

Turn ON / OFF the monitor

MUTE

Turn ON / OFF the sound

AUTO

Auto adjust position of the screen (in VGA mode)

COLOR TEMPERATURE

Select color temperature of the screen

SCAN MODE

Select the scan mode of the screen

VOL- / VOL+

Increase / Decrease the volume level

MENU / EXIT

Activate and exit the OSD menu

KEY LOCK

Locking the button (Prevent operation)

STILL

Freeze the current image

C PIP CONTROL MENU

S. SET

Select between main and PIP audio input

PIP

Activates PIP/PBP mode

P. INPUT

Select an input source for PIP mode

P. LOCATION

Select a location for PIP mode

P. SIZE

 
Select a size for PIP mode

P. SWAP

Swap between main and PIP input

4-2 Menu Setting (VIDEO, S-VIDEO Mode)

PICTURE

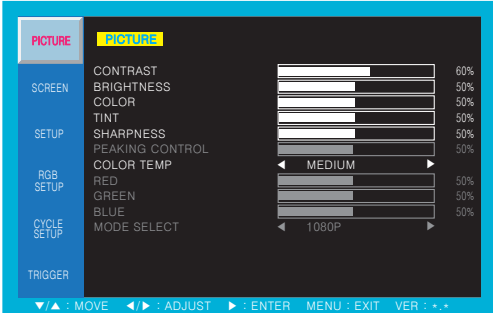

1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the ▶/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

CONTRAST : Adjust visual color contrast
COLOR : Adjust visual color of screen
SHARPNESS : Adjust sharpness of screen

 
BRIGHTNESS : Adjust color brightness
TINT : Adjust tint of color
COLOR TEMP : Switch color temperature of screen

CONTRAST




Default setting is 60% and adjustable from range of 0 to 100%

BRIGHTNESS

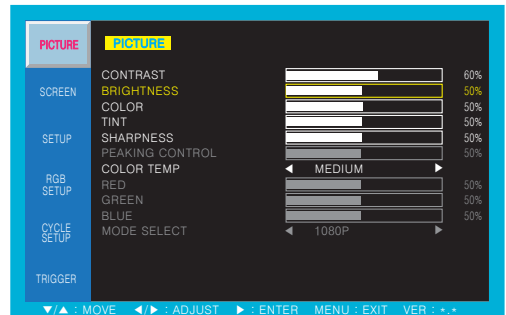


Default setting is 50% and adjustable from range of 0 to 100%

 COLOR

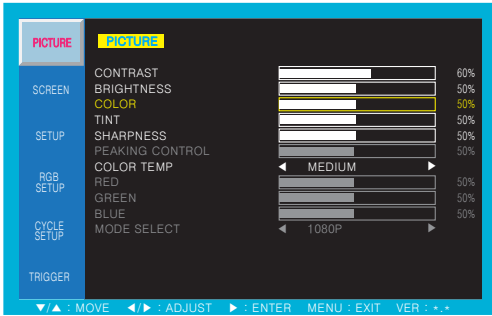


Default setting is 50% and adjustable from range of 0 to 100%

 TINT

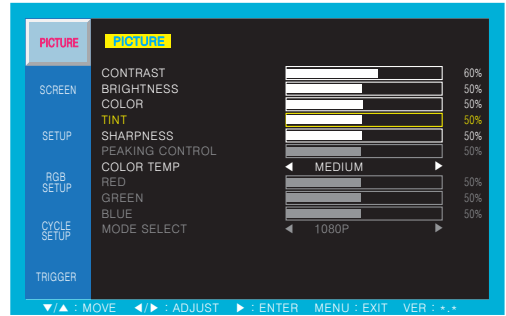


Default setting is 50% and adjustable from range of 0 to 100%

 SHARPNESS

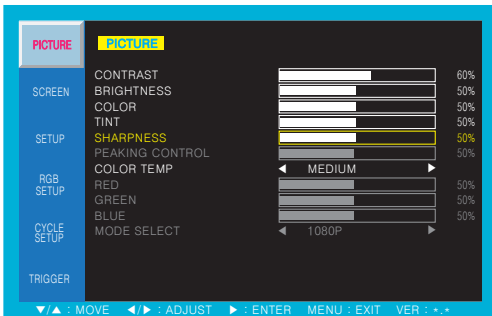

Default setting is 50% and adjustable from range of 0 to 100%

 COLOR TEMP

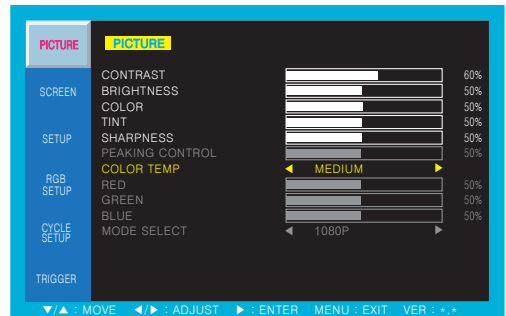

Default setting is MEDIUM and switch to WARM, USER and COOL color temperature options

USER - Default setting of RED, GREEN, BLUE is 50% and adjustable from range of 0 to 100%

SETUP

 


- INPUT : Select an input source for main screen
- SOUND MUTE : Turn on/off the sound
- NOISE REDUCTION : Set a noise reduction mode
- DEFAULT : Factory default setting
- NO OPERATION : Set a no operation mode

1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the ►/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

- LANGUAGE : Set to different language mode
- BUTTON LOCK : Locking the button (Prevent operation)
- OSD TIME : Set a time duration of OSD menu
- LINE SHIFT : Move a little to protect the screen

INPUT

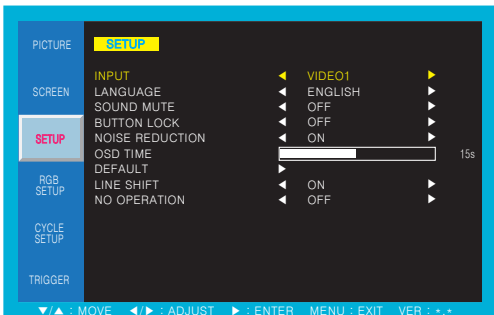


Inputs can be set to VIDEO1, VIDEO2, S-VIDEO, RGB PC, DVI, HDMI1, HDMI2 mode

LANGUAGE




Default setting is ENGLISH and language setting can be set to ITALIAN, FRENCH, SPANISH and GERMAN

 DEFAULT

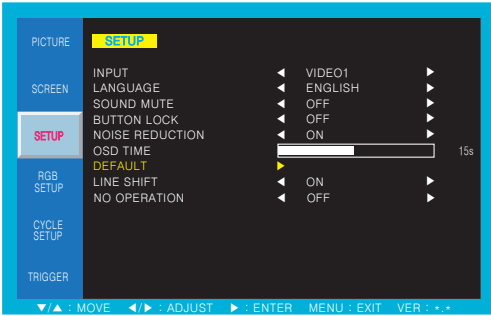


DEFAULT is set OSD menu to factory default

 LINE SHIFT

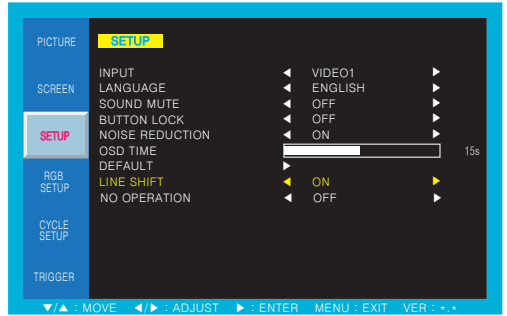


Default setting is ON and switch to OFF line shift option

 NO OPERATION

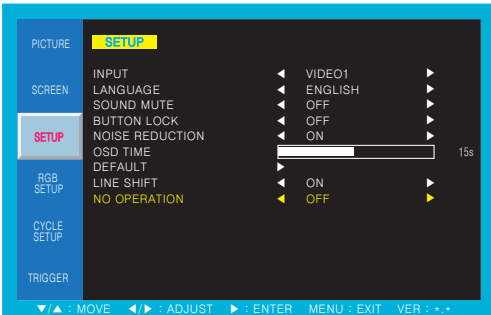

Default setting is OFF and switch to ON no operation option

 CYCLE SETUP

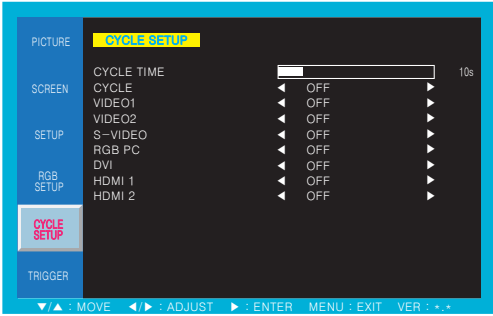


CYCLE TIME : Adjust cycle time to displayed on the screen

1. Press the MENU/EXIT key to access menu.
2. Use the $\blacktriangleup/\blacktriangledown$ arrow to highlight a selection.
3. Press the \blacktriangleright /SELECT to choose an item.
4. Use the $\blacktriangleup/\blacktriangledown$ arrow to highlight a selection.
5. Use the $\blacktriangleup/\blacktriangledown$ arrow to adjust the setting on a selected item.


CYCLE : Selected mode keep change continuously

 CYCLE TIME

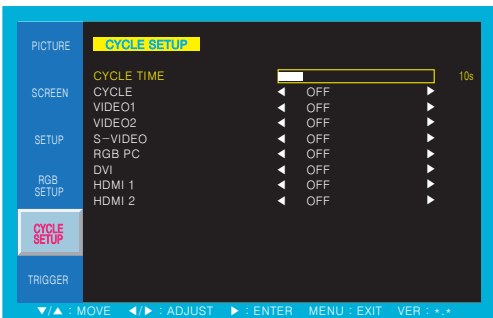

Default setting is 10s and adjustable from range of 10 to 30s

 
CYCLE

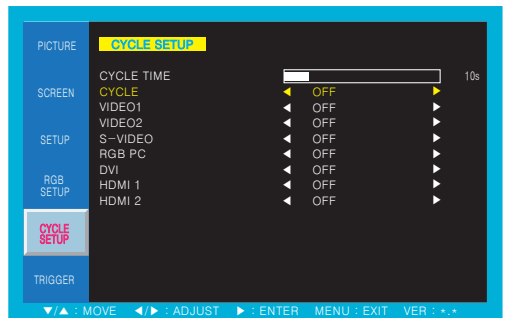

Default setting is OFF and switch to ON cycle option

4-3 Menu Setting (VGA Mode)

 PICTURE

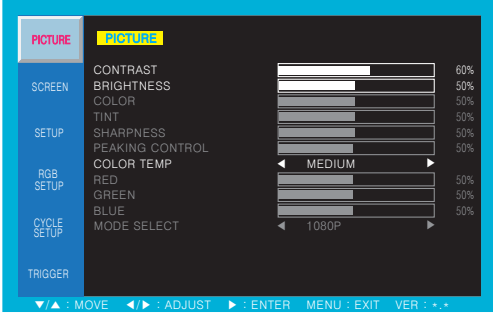


1. Press the MENU/EXIT key to access menu.
2. Use the \blacktriangle & \blacktriangledown arrow to highlight a selection.
3. Press the \blacktriangleright /SELECT to choose an item.
4. Use the \blacktriangle & \blacktriangledown arrow to highlight a selection.
5. Use the \blacktriangle & \blacktriangledown arrow to adjust the setting on a selected item.

CONTRAST : Adjust visual color contrast
 COLOR TEMP : Switch color temperature of screen


BRIGHTNESS : Adjust color brightness

 CONTRAST

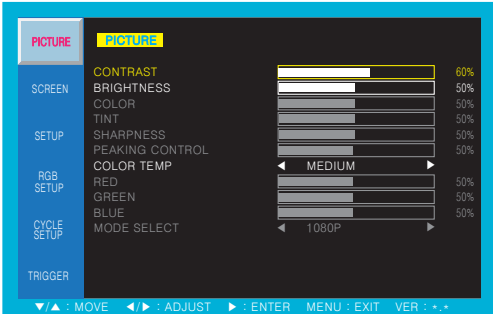


Default setting is 60% and adjustable from range of 0 to 100%

 BRIGHTNESS

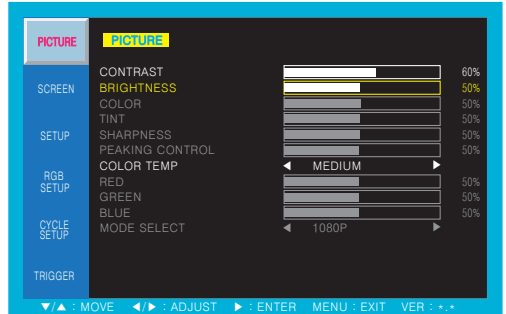

Default setting is 50% and adjustable from range of 0 to 100%

 
COLOR TEMP

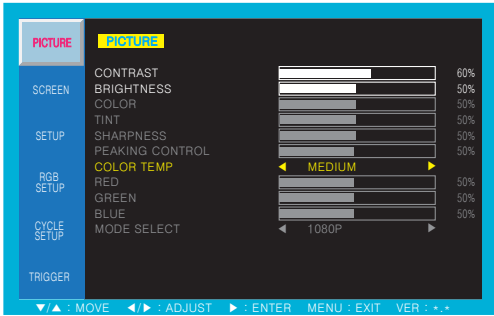

Default setting is MEDIUM and switch to WARM, USER and COOL color temperature options

USER - Default setting of RED, GREEN, BLUE is 50% and adjustable from range of 0 to 100%

 
SCREEN

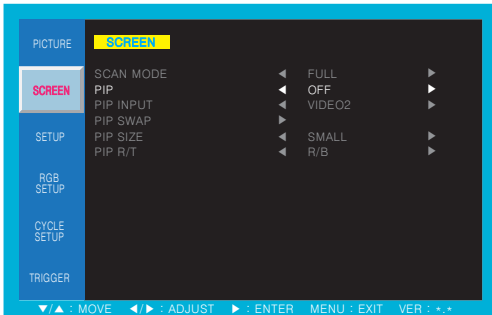

1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the▶/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

PIP : Activates PIP/PBP mode

 RGB SETUP

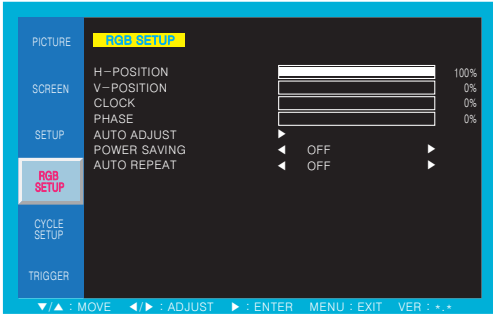


1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the▶/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

H-POSITION : Adjust horizontal position of monitor
 CLOCK : Adjust clock of monitor
 AUTO ADJUST : Auto adjust position of screen
 AUTO REPEAT : Adjust auto repeat of monitor


V-POSITION : Adjust vertical position of monitor
 PHASE : Adjust phase of monitor
 POWER SAVING : Power saving mode

 H-POSITION

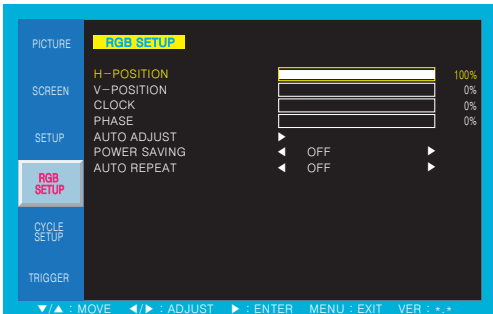


Can be set between 0 to 100% horizontal position of monitor by manually

 V-POSITION

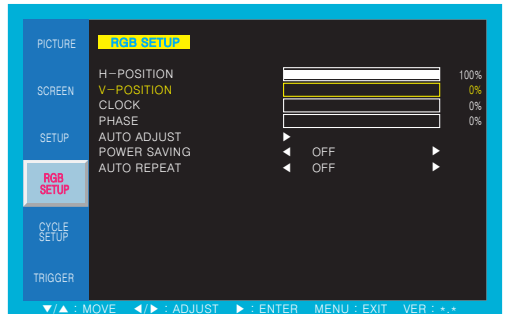


Can be set between 0 to 100% vertical position of monitor by manually

 CLOCK

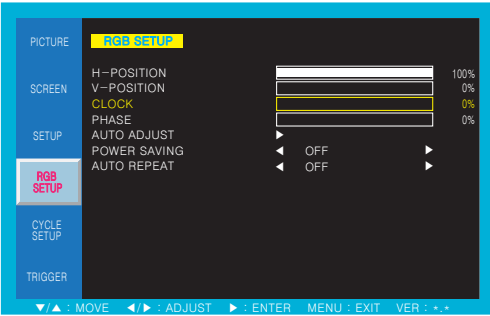


Can be set between 0 to 100% clock of monitor by manually

 PHASE

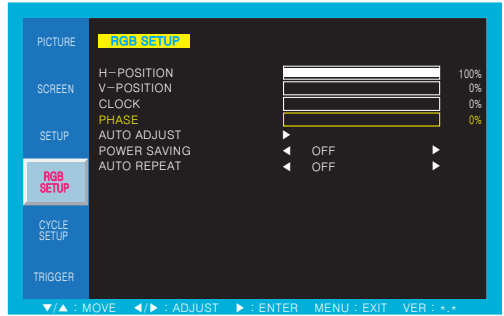


Can be set between 0 to 100% phase of monitor by manually

 AUTO ADJUST

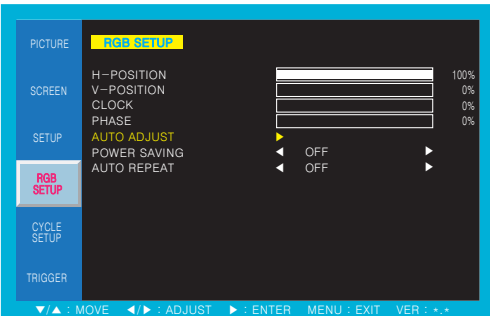


Auto adjust position and image of screen

 POWER SAVING

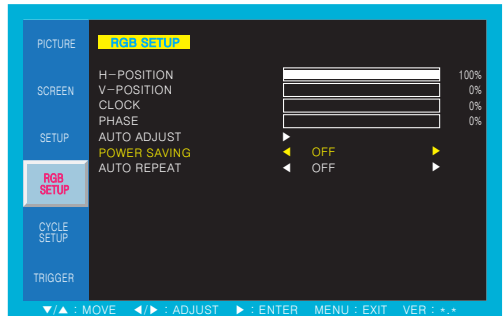


Default setting is OFF and switch to ON power saving mode

 AUTO REPEAT

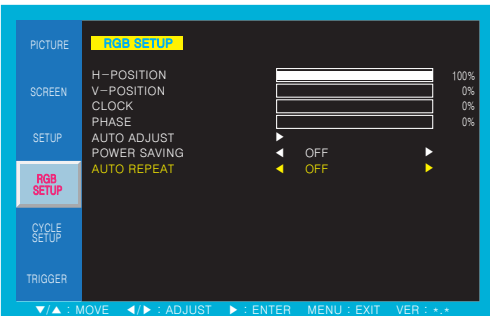

Default setting is OFF and switch to ON auto repeat mode

 
CYCLE SETUP

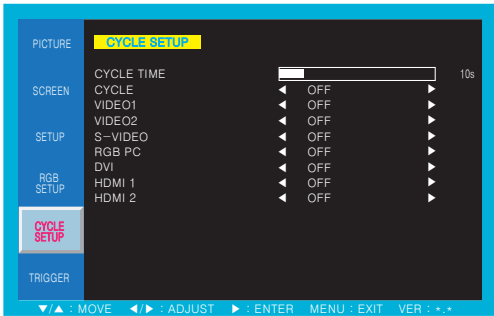

1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the ►/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

*This function of each menu is listed page 19
Please refer to page 19 for CYCLE SETUP menu*

 TRIGGER

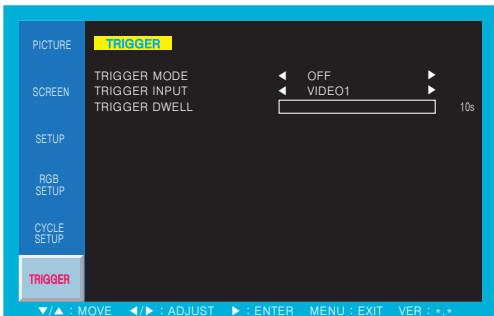

1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the ►/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

*This function of each menu is listed page 20
Please refer to page 20 for TRIGGER menu*

VGA / DVI / HDMI Mode Tables

VGA / DVI Mode

<i>MODE</i>	<i>RESOLUTION</i>	<i>VERTICAL FREQUENCY (Hz)</i>
<i>VGA</i>	<i>720X400</i>	<i>70</i>
	<i>640X480</i>	<i>60 / 72 75</i>
<i>SVGA</i>	<i>800X600</i>	<i>50 / 60 / 72 / 75</i>
<i>XGA</i>	<i>1024X768</i>	<i>50 / 60 / 75</i>
<i>WXGA</i>	<i>1366X768</i>	<i>60</i>
<i>UXGA</i>	<i>1600X1200</i>	<i>60</i>
<i>HD</i>	<i>1920X1080</i>	<i>60</i>


HDMI Mode

<i>MODE</i>	<i>RESOLUTION</i>	<i>VERTICAL FREQUENCY (Hz)</i>
<i>EDTV 480i</i>	<i>720X480</i>	<i>30</i>
<i>EDTV 576i</i>	<i>720X576</i>	<i>25</i>
<i>SDTV 480p</i>	<i>720X480</i>	<i>60</i>
<i>SDTV 576p</i>	<i>720X576</i>	<i>60</i>
<i>HDTV 720p</i>	<i>1280X720</i>	<i>50 / 60</i>
<i>HDTV 1080i</i>	<i>1920X1080</i>	<i>30 / 25</i>
<i>HDTV 1080p</i>	<i>1920X1080</i>	<i>50 / 60</i>

Note : Not all resolutions generated by your video source are available on the monitor.

4-4 Menu Setting (DVI, HDMI Mode)

 PICTURE

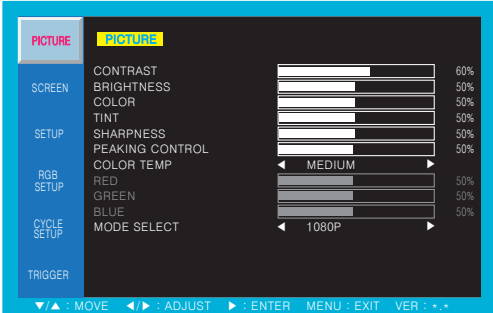

1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the ►/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

CONTRAST : Adjust visual color contrast
COLOR : Adjust visual color of screen
SHARPNESS : Adjust sharpness of screen

BRIGHTNESS : Adjust color brightness
TINT : Adjust tint of color
COLOR TEMP : Switch color temperature of screen

CONTRAST



 
Default setting is 60% and adjustable from range of 0 to 100%

BRIGHTNESS




Default setting is 50% and adjustable from range of 0 to 100%

COLOR

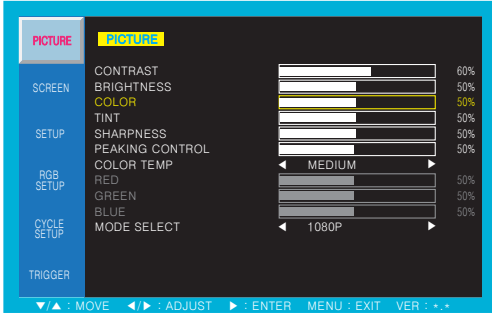


Default setting is 50% and adjustable from range of 0 to 100%

 TINT

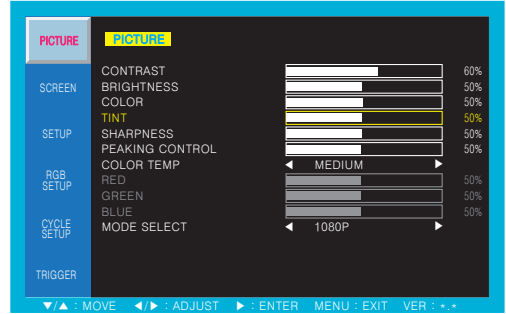


Default setting is 50% and adjustable from range of 0 to 100%

 SHARPNESS

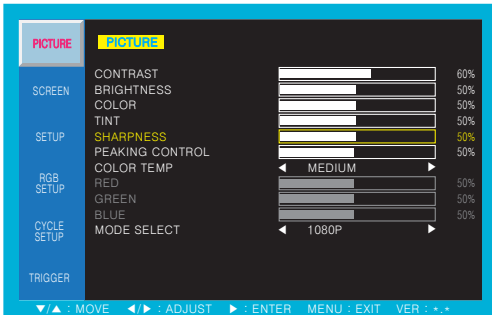


Default setting is 50% and adjustable from range of 0 to 100%

 PEAKING CONTROL

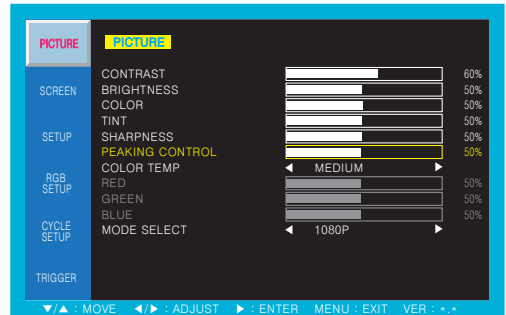


Default setting is 50% and adjustable from range of 0 to 100%

 COLOR TEMP

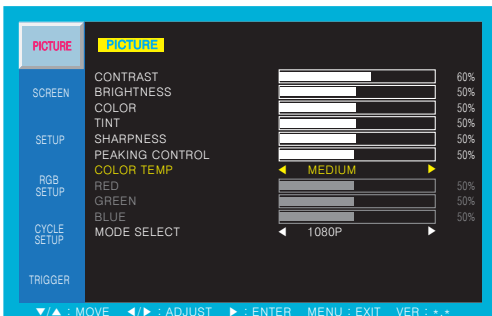


Default setting is MEDIUM and switch to WARM, USER and COOL color temperature options
 USER - Default setting of RED, GREEN, BLUE is 50% and adjustable from range of 0 to 100%

 MODE SELECT

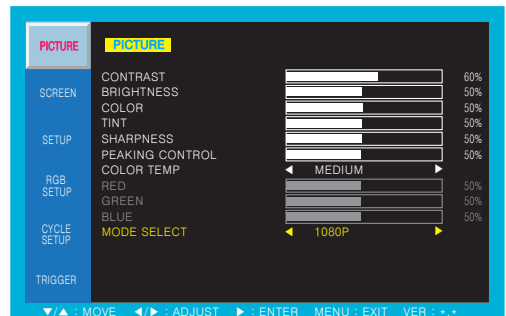

Default setting is 1080P and switch to 1920X1080 mode
 1080P - Bluray, DVD player and AV video equipment (2% Over Scan)
 1920X1080 - It is the fit image on PC In (Just/Real Scan)

 
SCREEN

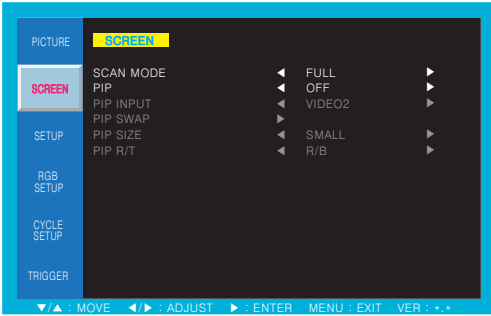

1. Press the MENU/EXIT key to access menu.
2. Use the \blacktriangle & \blacktriangledown arrow to highlight a selection.
3. Press the \blacktriangleright /SELECT to choose an item.
4. Use the \blacktriangle & \blacktriangledown arrow to highlight a selection.
5. Use the \blacktriangle & \blacktriangledown arrow to adjust the setting on a selected item.

*This function of each menu is listed page 22
Please refer to page 22 for SCREEN menu*

 
SETUP

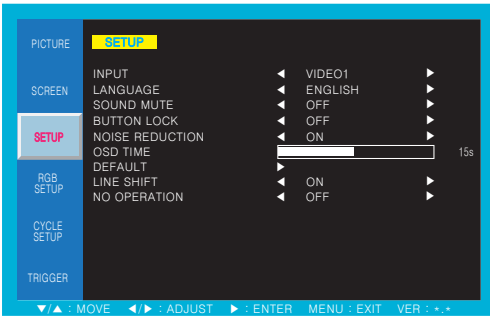

1. Press the MENU/EXIT key to access menu.
2. Use the \blacktriangle & \blacktriangledown arrow to highlight a selection.
3. Press the \blacktriangleright /SELECT to choose an item.
4. Use the \blacktriangle & \blacktriangledown arrow to highlight a selection.
5. Use the \blacktriangle & \blacktriangledown arrow to adjust the setting on a selected item.

*This function of each menu is listed page 16
Please refer to page 16 for SETUP menu*

 CYCLE SETUP

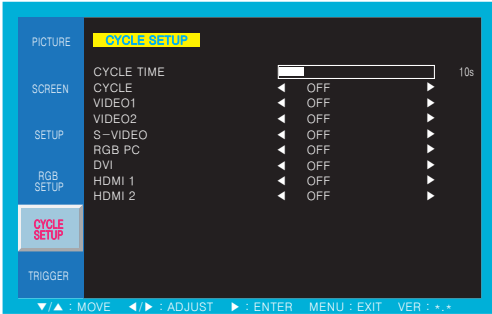

1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the▶/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

*This function of each menu is listed page 19
Please refer to page 19 for CYCLE SETUP menu*

TRIGGER



1. Press the MENU/EXIT key to access menu.
2. Use the ▲&▼arrow to highlight a selection.
3. Press the▶/SELECT to choose an item.
4. Use the ▲&▼arrow to highlight a selection.
5. Use the ▲&▼arrow to adjust the setting on a selected item.

*This function of each menu is listed page 20
Please refer to page 20 for TRIGGER menu*

MEMO

MEMO



eneo® is a registered trademark of Videor E. Hartig GmbH
Exclusive distribution through specialised trade channels only.

Videor E. Hartig GmbH
Carl-Zeiss-Straße 8 · 63322 Rödermark, Germany
Tel. +49 (0) 6074 / 888-0 · Fax +49 (0) 6074 / 888-100

www.videor.com
www.eneo-security.com



Technical changes reserved.
© Copyright by Videor E. Hartig GmbH 12/2014