

# Network Camera FXC-1302/W

## User Manual

V3.0.0



ONVIF





# Safety Instructions

- Read these safety instructions and the operation manual first before you install and commission the camera.
- Keep the manual in a safe place for later reference.
- Protect your camera from contamination with water and humidity to prevent it from permanent damage.  
Never switch the camera on when it gets wet. Have it checked at an authorized service center in this case.
- Never operate the camera outside of the specifications as this may prevent the camera functioning.
- Do not operate the cameras beyond their specified temperature, humidity or power ratings. Operate the camera only at a temperature range of -10°C to +50°C and at a humidity of max. 90%.
- To disconnect the power cord of the unit, pull it out by the plug. Never pull the cord itself.
- Pay attention when laying the connection cable and observe that the cable is not subject to heavy loads, kinks, or damage and no moisture can get in.
- The warranty becomes void if repairs are undertaken by unauthorized persons.  
Do not open the camera housing.
- Never point the camera towards the sun with the aperture open. This can destroy the sensor.
- Installation, maintenance and repair have to be carried out only by authorized service centers.  
Before opening the cover disconnect the unit from mains input.
- The fitter is responsible for the system of protection being followed in accordance with the technical data, e.g. by sealing of the cable outlet with silicone.
- Contact your local dealer in case of malfunction.
- Only use original parts and original accessories from Videor E. Hartig GmbH.
- Do not use strong or abrasive detergents when cleaning the dome. Use a dry cloth to clean the dome surface.  
In case the dirt is hard to remove, use a mild detergent and wipe gently.
- **During assembly, care must be taken to ensure that existing seals are correctly inserted and are not displaced as a result of assembly.**  
**You must not continue to use damaged seals.**

**NOTE: This is a class A digital device. This digital device can cause harmful interference in a residential area;  
in this case the user may be required to take appropriate corrective action at his/her own expense.**

# Table of Contents

Chapter 1	Introduction .....	1
1.1	Network camera Functions and Features .....	1
1.2	Applications.....	1
1.3	Package Contents .....	2
Chapter 2	Installation.....	3
2.1	Camera Description.....	3
2.1.1	Camera Physical Description .....	3
2.1.3	Camera Connection.....	4
2.2	Hardware Installation.....	5
Chapter 3	Network Camera Connection.....	7
3.1	Cable Network.....	7
3.2	Wireless Network.....	7
Chapter 4	Network Access .....	9
4.1	Access over IE Browser.....	9
4.1.1	Live View .....	10
4.1.2	Parameters Configuration .....	12
4.2	Access over Client Software .....	26
4.2.1	Client Software Installation.....	26
4.2.2	Live View .....	28
4.2.3	Camera Parameters Configuration.....	31
Chapter 5	Access over Internet.....	34
5.1	Access network camera with static IP .....	34
5.2	Access network camera with dynamic IP .....	35
Chapter 6	Specifications and Drawings.....	39
Appendix 1	SADP Introduction .....	42
Appendix 2	Port Map .....	44
Appendix 3	Pin Definition .....	46

# Chapter 1 Introduction

Network camera is a kind of embedded digital surveillance product that combines the features of both traditional analog camera and network DVS (Digital Video Server). Due to the embedded Linux operation system and the latest Davinci hardware platform of TI, the system operates with high scheduling efficiency. Furthermore, the firmware is burned in the flash, which makes the product small, reliable and highly stable.

## 1.1 Network camera Functions and Features

### Functions:

- ◆ Network Function: Support the TCP/IP protocols and IE browsing.
- ◆ Heartbeat Function: The server can acquire real time operating performance of the network camera through the heartbeat function.
- ◆ Alarm Function: Supports Motion Detection, Storage exception.
- ◆ User Management: Support multilevel right management. The administrator can create up to 15 separate users with different right levels, which highly improves the system security.

### Compression Functions:

- ◆ Support 1 channel video signal and standard H.264 encoding compression, which supports both variable bit rate and variable frame rate; besides, you can self-define both the video quality and its compressed bit rate.

### Remote Control:

- ◆ The product offers a 10M/100M self-adaptive Ethernet interface.
- ◆ Support TCP/IP, HTTP, DHCP, DNS, DDNS, RTP/RTSP, PPPoE, SMTP, NTP protocols.
- ◆ Set the parameters, browse real time videos or check the camera performance by software or IE, and store the compressed bit rate through network.
- ◆ Support remote upgrades and maintenance.

## 1.2 Applications

This camera is ideal for remote control network applications. E.g.:

1. Network surveillance for supermarkets and factories.
2. Remote surveillance for homes and offices.
3. Indoor monitoring scenes, such as hotel, corridor, stairway.

## 1.3 Package Contents

1. Camera × 1
2. Bracket × 1
3. User Manual × 1
4. Quick Start Guide × 1
5. Installation Guide × 1
6. CD × 1


## Chapter 2 Installation

### NOTE:

1. Please check if all the items on the package list have been included with your camera.
2. Read the following contents carefully before the installation.
3. Make sure that all the related equipment is power-off during the installation.
4. Check the power supply to prevent any damage caused by mismatching problems.
5. If the product does not operate properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. Users are responsible for any problem caused by modification or repairing without authorization.

### 2.1 Camera Description

#### 2.1.1 Camera Physical Description

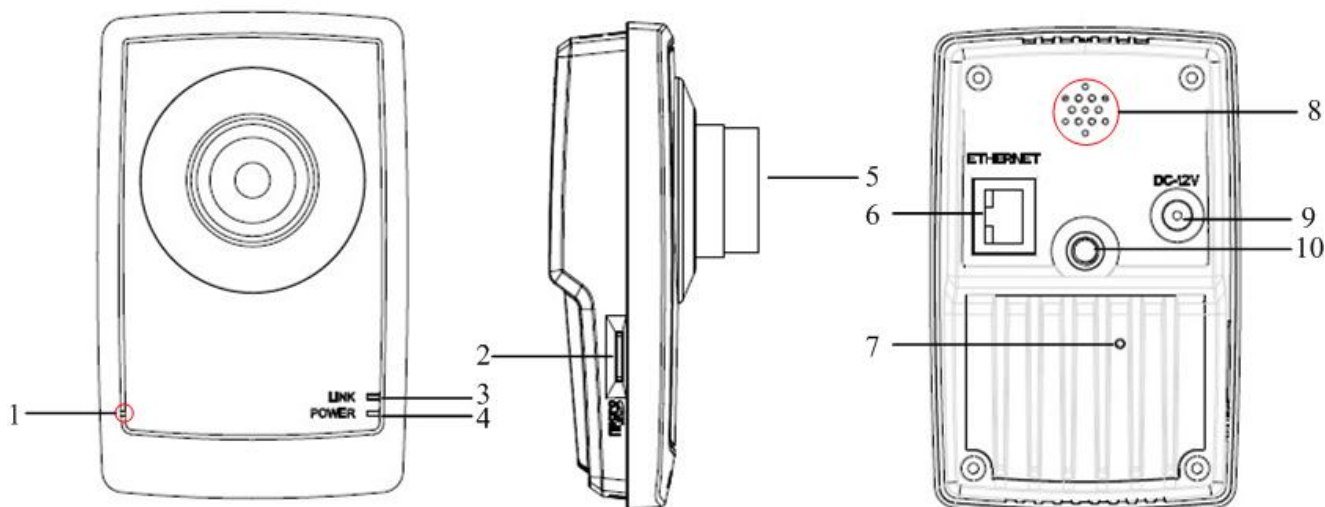



Serial NO.	Description
1	Microphone hole
2	Micro SD card slot
3	LINK: Network status LED indicator. When the network is connected, the LED flickers in green.
4	Power LED indicator, which turns red when power is applied to the unit
5	Lens
6	ETHERNET: 10M / 100M self-adaptive Ethernet interface
7	RESET: Reset all parameters to factory default settings
8	Speaker hole
9	Power supply
10	Bracket mounting holes, used to fix the camera to the bracket

**NOTE:**

When the camera is power up, press the 'RESET' button for about 10 seconds, then all parameters, including user name, password, IP address, port number, etc., will be reset to the factory default settings.

### 2.1.3 Camera Connection

**Step1:**


Connect one end of the network cable to the camera and the other end to PC.

**Step2:**

Connect one end of the power cord to the camera and the other end to power socket to supply power for the camera.

**Step3:**

Access the camera over IE or client software to view live video images.

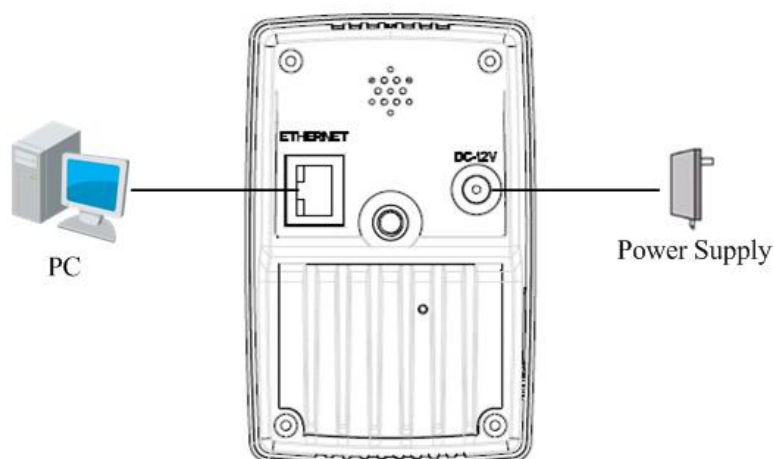

## 2.2 Hardware Installation

Cube camera can be fixed in both wall and ceiling, customers can choose different ways to install the camera according to their specific needs. The following section introduces the ceiling mounting, and the wall mounting follows the same way:

Step 1: Fix the camera mounting bracket to the ceiling.

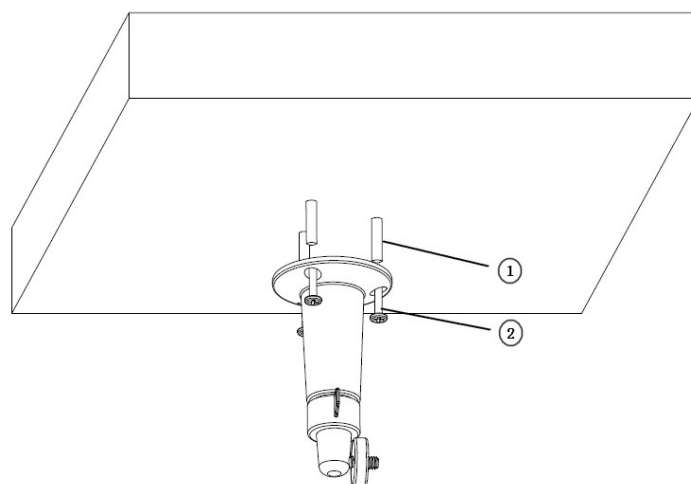


Fig 2.2.1 Fix camera mounting bracket

### NOTE:

If it is wall, you need to fix the expand bolt (note: the mounting hole of the expand bolt should align with the bracket) before fixing the bracket as ② in Fig 2.2.1 . If the wall surface is wooden, the part of ② in Fig 2.2.1 can be ignored and you can use the self-tapping screw to directly fix the bracket. Please note that the wall on which the camera is fixed should be able to bear at least three times the weight of the bracket and the camera.

Step 2: Screw the mounting hole to the mounting bracket, and then adjust the camera to the desired monitoring location and finally tighten the knob on bracket to secure the camera to the ceiling.

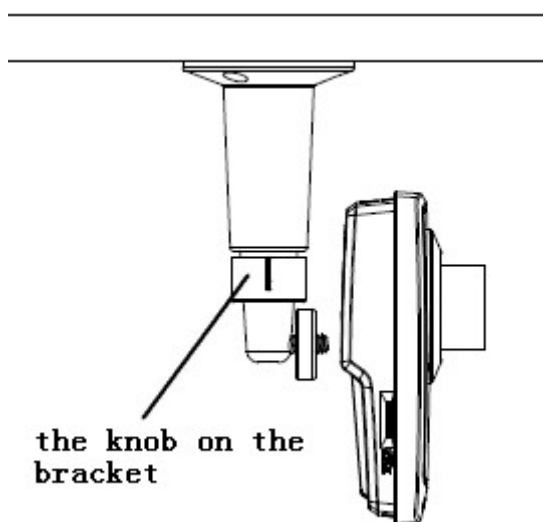


Fig 2.2.2 Fix the Camera

Step 3: Viewing the video on the computer, if the scene is not that you want to monitor, loosen the knob on the mounting bracket and adjust the camera lens to the desired monitoring scene, and finally tighten the knob on bracket.

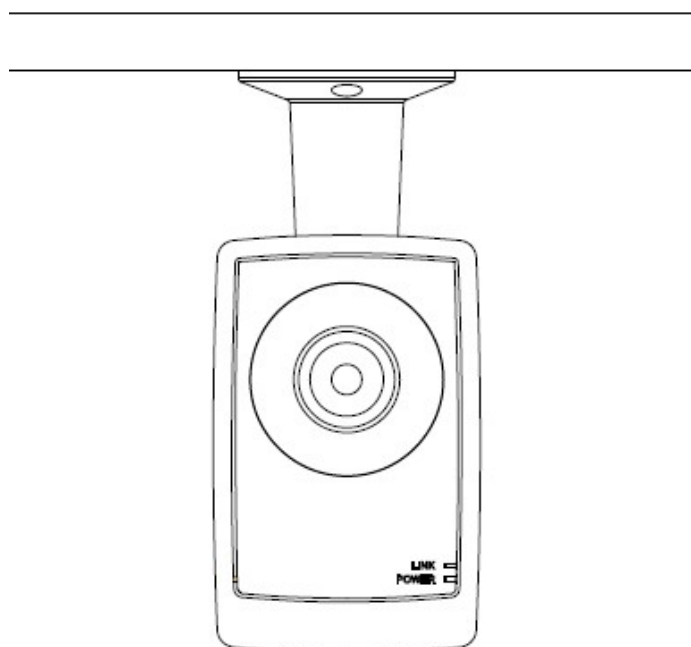


Fig 2.2.3 Done

# Chapter 3 Network Camera Connection

## 3.1 Cable Network

Two methods can be used to connect between network camera and PC, shown as below:

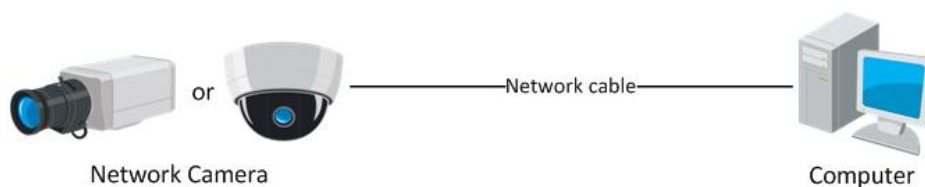


Fig. 3.1.1 Cross Line Connection

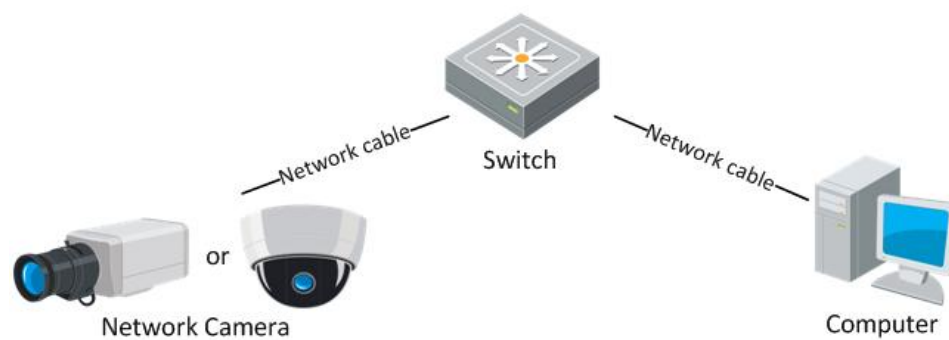


Fig. 3.1.2 Direct Line Connection

## 3.2 Wireless Network

**Note:** This section is only for wireless network camera with mark '-W' in the model number.

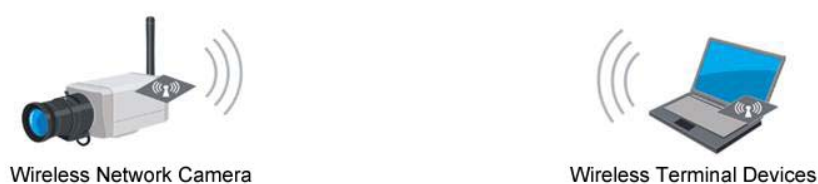


Fig. 3.2.1 Peer-to-peer Communication Through Wireless Network

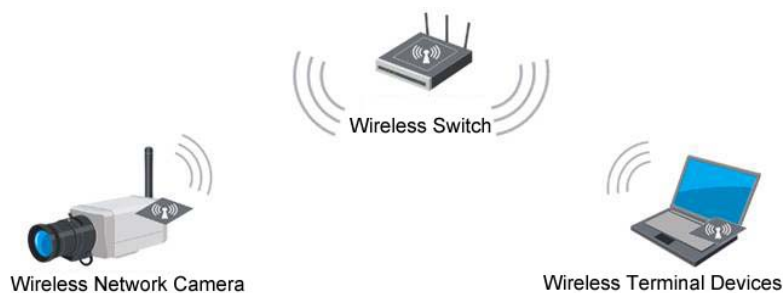


Fig. 3.2.2 Communication Via Wireless Switching Equipment

Before visiting network camera over network, user should acquire its IP address first. SADP is a software tool which can automatically detect network device in the LAN and give the device's information like IP address, mask, port number, device serial number, software version, etc., shown as Fig. 3.3.

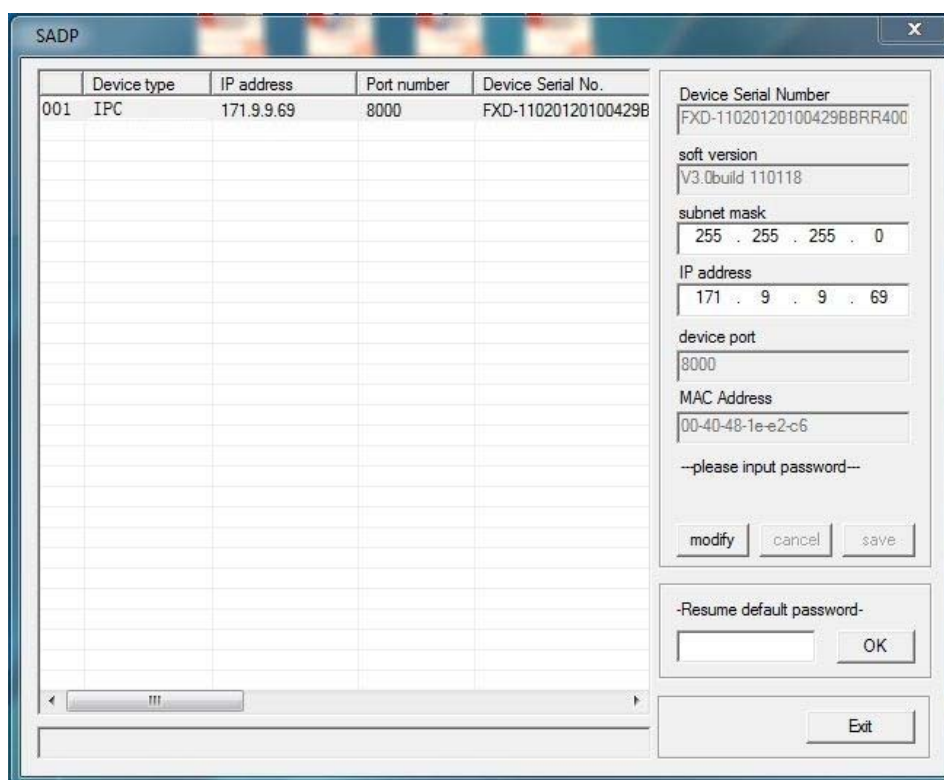


Fig. 3.3

Select the device, and set its IP address and mask at the same network segment with the PC. For the detailed introduction of SADP, please refer to Appendix 1.

**Note:** The network camera is set with the factory default IP address of "192.0.0.64", the port of "8000", the super user name of "admin" and the password of "12345".

## Chapter 4 Network Access

After hardware installation, user can view live video and configure parameters for the network camera, including IP address, subnet mask and port number, etc. The following two methods can be used to access the camera:

1. View live video and configure parameters over IE browser.
2. View live video and configure parameters over client software.

### 4.1 Access over IE Browser

Before access to the camera over IE browser, user should adjust the security level.

Open the IE browser, and set the security level to *Medium* in *Tools/InternetOptions/Security/Custom Level...*, and enable or prompt ActiveX Control and Plug-in directly as well.

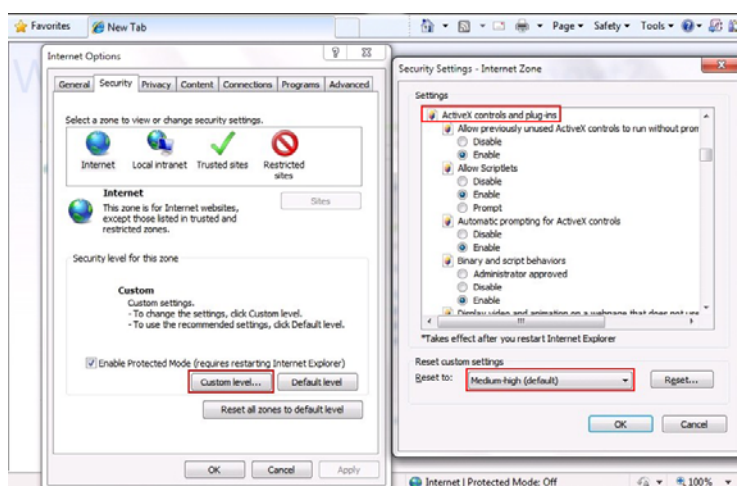


Fig. 4.1.1 Adjust the Security Level

### 4.1.1 Live View

#### Step 1: Install Active-X Control

Type the IP address of the network camera and press *Enter*, then the ActiveX mention dialog will pop up.

Click *Install* to install the ActiveX control.

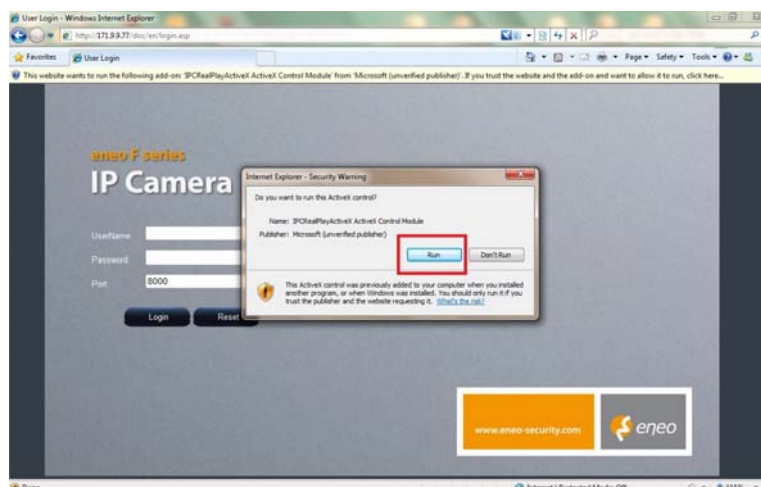


Fig. 4.1.2 Install the ActiveX Control

#### Step 2:

Input the *Username* (default: admin), *Password* (default: 12345) and *Port* (default: 8000) of the camera, and then click [Login].

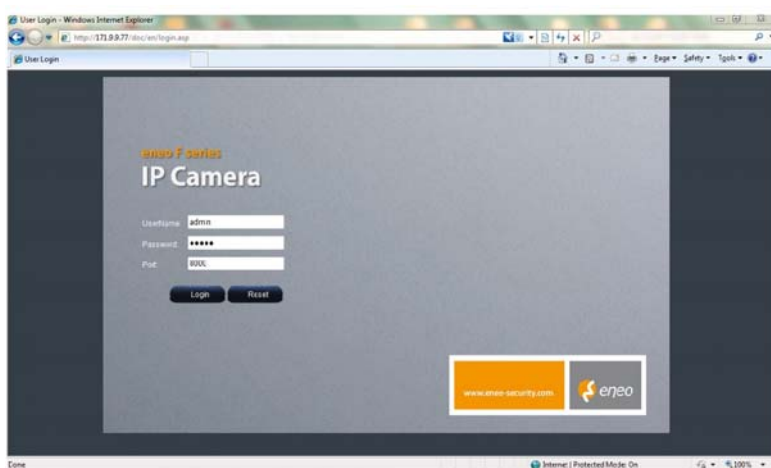


Fig. 4.1.3 Login Interface

#### Step 3:

After successful login, user is allowed to view the live video. Refer to Figure 4.1.4.

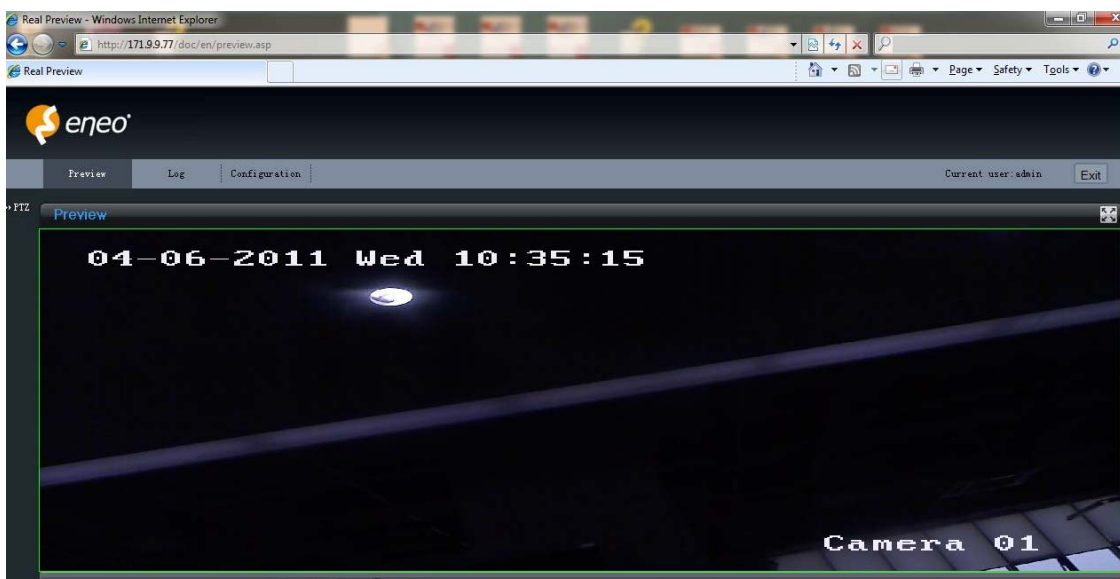


Fig. 4.1.4 Live View Page

Icons on Live View Page:

Icon	Description
	Full-screen display mode
	Exit full-screen display mode
	Start Preview
	Stop Preview
	Capture Picture
	Start/Stop Record
	Digital Zoom
	Video Parameters

**Digital Zoom:**

Click mouse in the desired position of live video image and scroll the mouse to realize zoom in and zoom out function.

**Video Parameters:**

Icon	Description
	Brightness: 0~100 configurable
	Contrast: 0~100 configurable
	Saturation: 0~100 configurable
	Hue: 0~100 configurable
	Gain: 0~100 configurable
	Exposure time: 0~40000 configurable
	Restore default

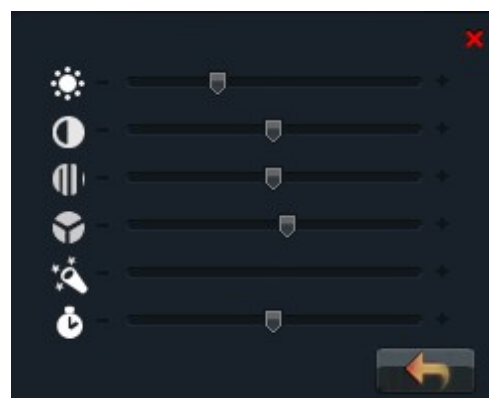


Fig. 4.1.5 Video Parameters



## 4.1.2 Parameters Configuration

Click **Configuration** to enter the Parameters Configuration interface.

### 4.1.2.1 Local Configuration

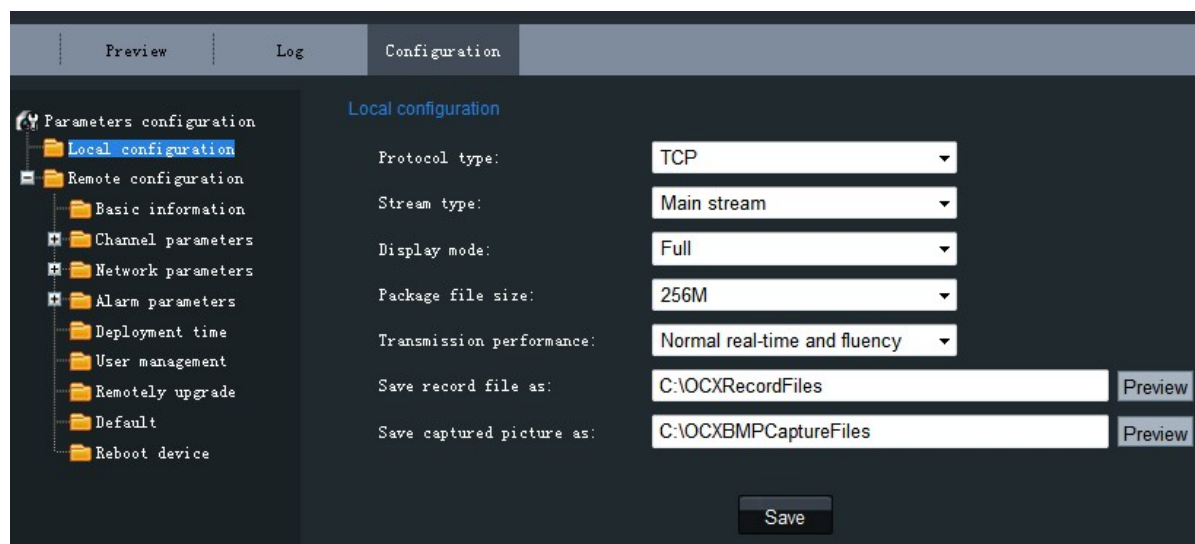


Fig. 4.1.6 Local Configuration

#### Local Configuration:

Parameters	Description
Protocol type	TCP and UTP selectable
Stream type	Main stream and Sub stream selectable
Display mode	Full-screen, 4:3 mode, 16:9 mode or adjustable to resolution
Package file size	128M, 256M, 512M selectable
Transmission performance	Shortest delay mode, good real-time, normal real-time and fluency and good fluency options selectable
Save record file as	The default directory for saving record files is C: \OCXRecordFiles, which can be modified by user
Save captured picture as	The default directory for saving captured files is C:\OCXBMPCaptureFiles, which can be modified by user

### 4.1.2.2 Remote Configuration

#### Basic Information:

In the Basic Information settings interface, user is allowed to set the Device Name and Device ID, as well as view the information of IP camera, including Device Description, Device Location, MAC address, Device Type, Device SN, Firmware Version, and U-boot Version.

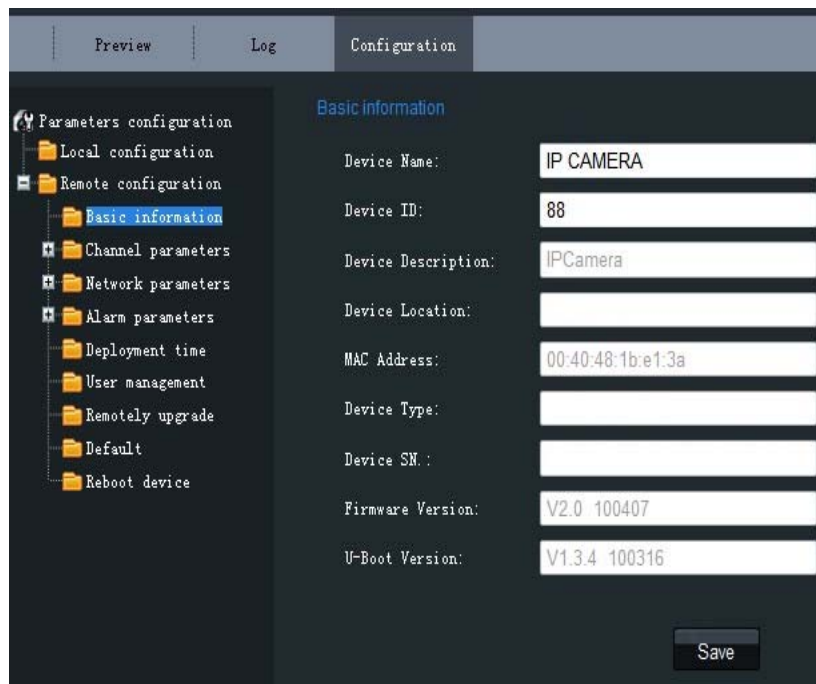


Fig. 4.1.7 Basic Information

#### Channel Parameters → Display Setting:

According to different requirements, enable the display of *Date&Time* and *Week* by clicking the checkbox. Different date formats can be selected.

The OSD Status can be set to transparent & flickering, transparent & unflickering, nontransparent & flickering, or nontransparent & unflickering.

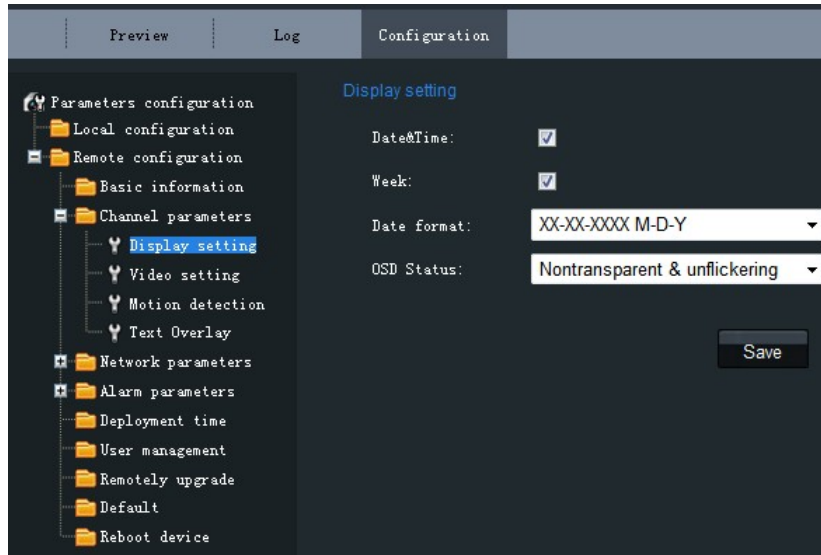


Fig. 4.1.8 Display Settings

## Channel Parameters → Video Settings:

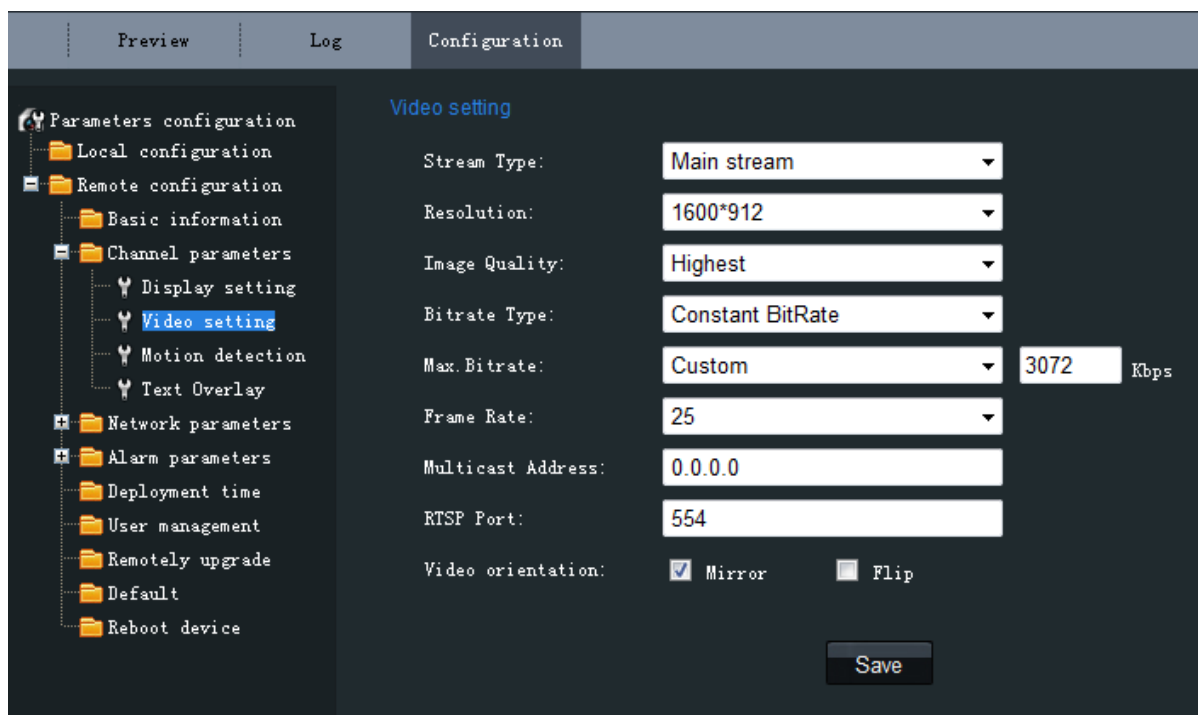


Fig. 4.1.9 Video Settings

Parameter	Description
Stream type	Select stream type to Main stream or Sub stream
Resolution	Select the resolution for your need,
Image Quality	Select image quality to Highest, High, Medium, Low, Lower or Lowest
Bitrate Type	Select the bitrate type to Constant bitrate or Variable bitrate
Max. Bitrate	Select or custom bitrate according to the resolution
Frame Rate	Select a proper frame rate for the corresponding resolution.
Multicast	Set the multicast address, with the default multicast of 0.0.0.0
RTSP Port	Set the RTSP port, with the default RTSP port of 554
Mirror	Change the left and right direction of the picture, like mirror
Flip	Rotate the picture 180°. Change the bottom of the picture to the top

## Channel Parameters →

### Motion Detection Setting:

Select the checkbox of *Enable motion detection* to enable this function.

### Zone Settings:

Click *Start draw* button to draw motion detection zone by clicking and dragging the mouse in the live video image.

User is allowed to draw multiple motion detection zones in the same picture.

When all zones have been set, click *Stop draw* to finish drawing.

### Sensitivity:

The sensitivity level can be set to 0, 1, 2, 3, 4 and 5. When it is set to 0, the sensitivity is disabled.

### Linkage:

The Linkage method can be selected to either *Email link* or *Trigger alarm output*.

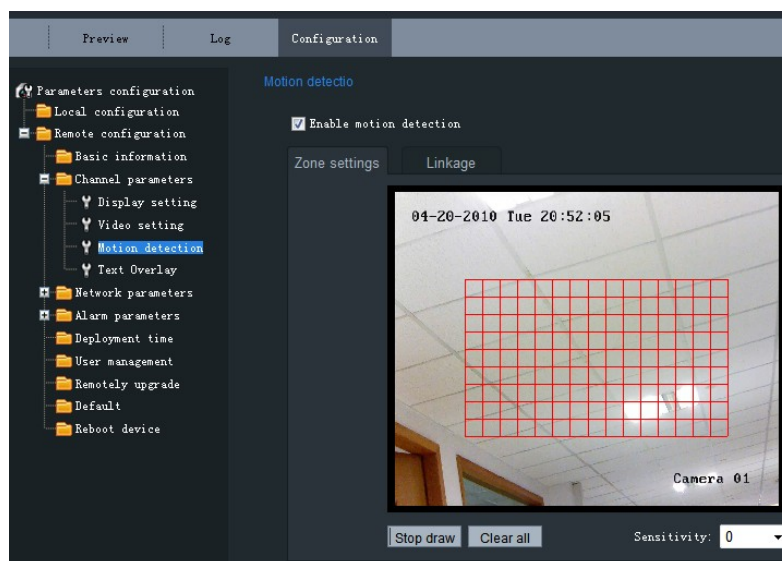


Fig. 4.1.10 Motion Detection Zone Settings

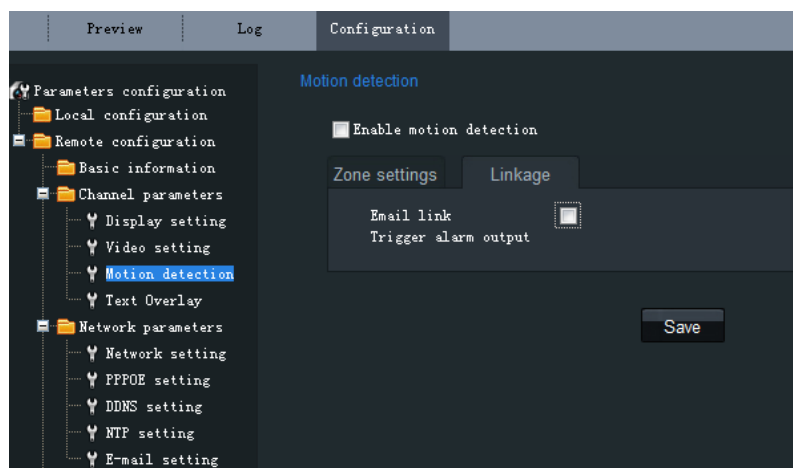


Fig. 4.1.11 Motion Detection Linkage Settings

### Channel Parameters → Text Overlay Setting:

Input the characters in the *Text Information* box and define the OSD location in the image by setting the *XPosition* and *YPosition*, and then select the checkbox of *OSD Text*. After clicking *Save* to finish the settings, the defined title will be displayed on the image.

#### Note:

The values of *XPosition* and *YPosition* refer to the position relative to the origin as the upper left corner of the image.

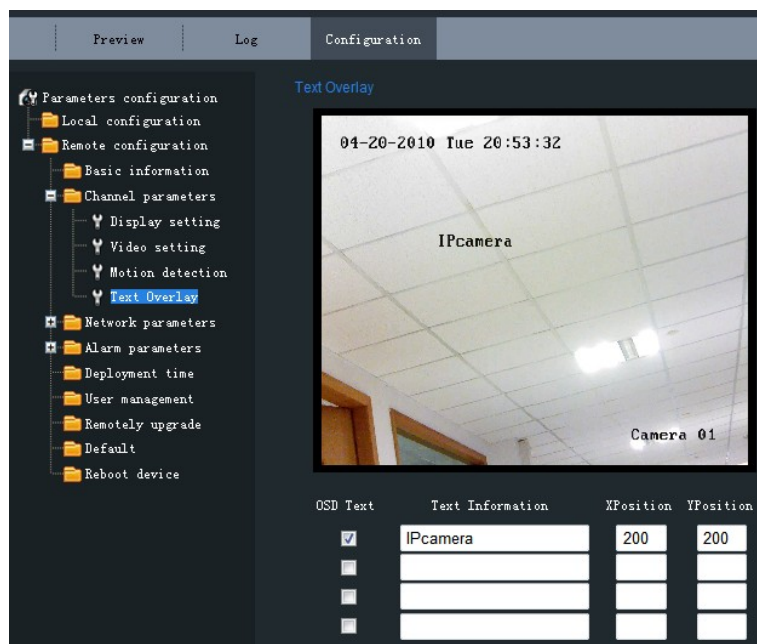


Fig. 4.1.12 Text Overlay Settings

### Network Parameters → Network Setting:

Set the IP Address, Subnet Mask, Gateway and DNS Server of the network camera.

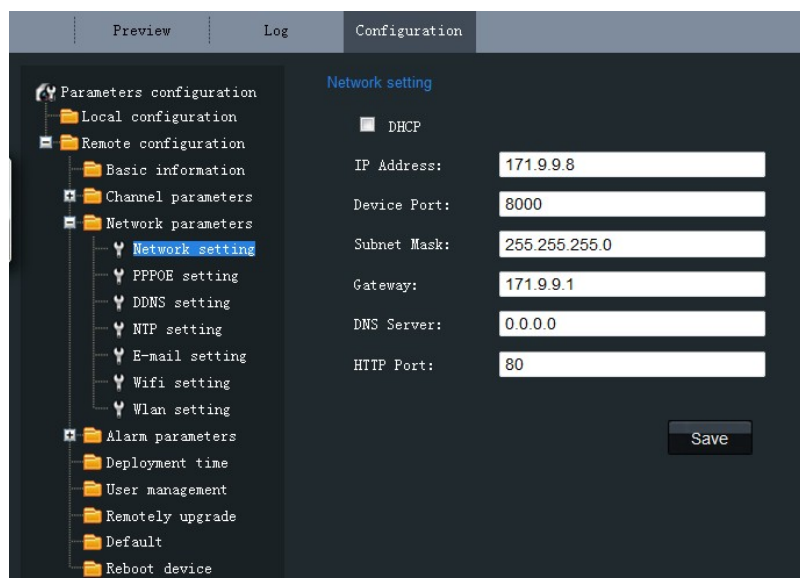


Fig. 4.1.13 Network Settings

## Network Parameters →

### PPPOE Setting:

Click the checkbox of *Enable PPPOE* to enable this function.

Input the PPPOE user name and password in the text box and then click *Save* to finish settings. After reboot, the camera will obtain a public IP address.

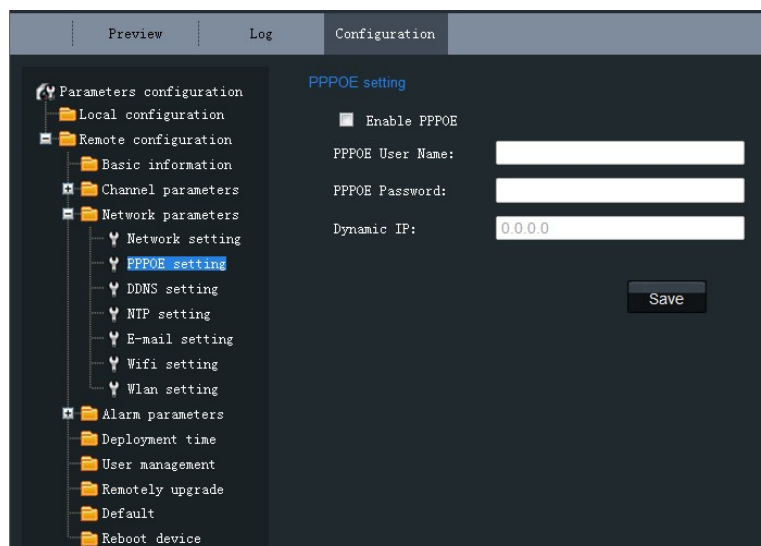


Fig. 4.1.14 PPPOE Settings

## Network Parameters → DDNS

### Setting:

Click the checkbox of *Enable DDNS* to enable this function.

The protocol type can be set to DynDNS.

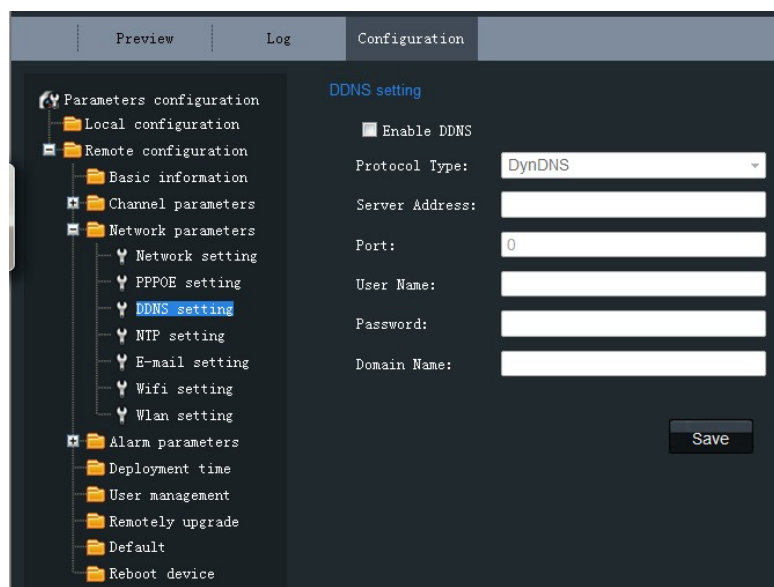


Fig. 4.1.15 DDNS Settings

If the protocol type is selected to DynDNS, please input the *Server Address*, e.g., members.dyn dns.org.

Port option is reserved and not configurable.

The *User Name* and *Password* refer to the user name and password registered in the DynDNS website.

The *Domain Name* refers to the domain name applied in the DynDNS website.

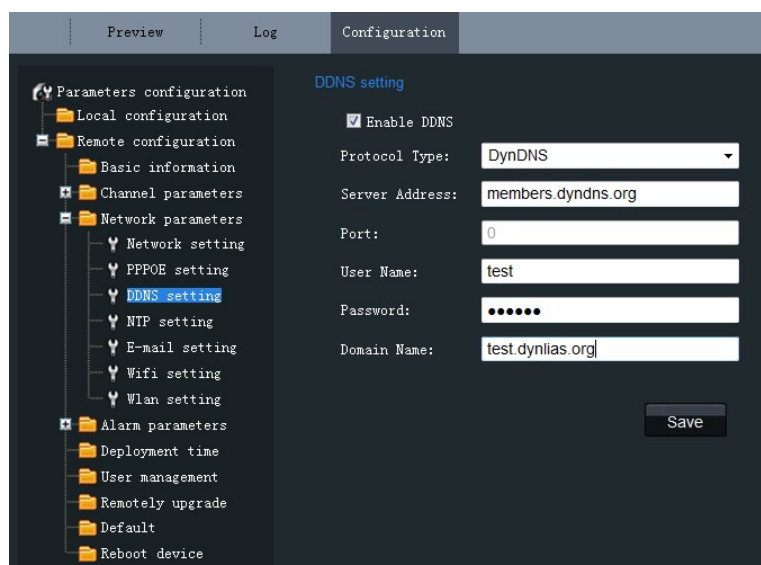


Fig. 4.1.16 DynDNS Settings

### Network Parameters → NTP Setting:

Click the checkbox of *Enable NTP* to enable this function. Input the *Server Address* and *Port* of NTP.

If the public network is applied, please input the NTP *Server Address* with provision of time sync service, e.g., 210.72.145.44.

In the private network is applied, the NTP software can be used to establish NTP server to achieve time synchronization.

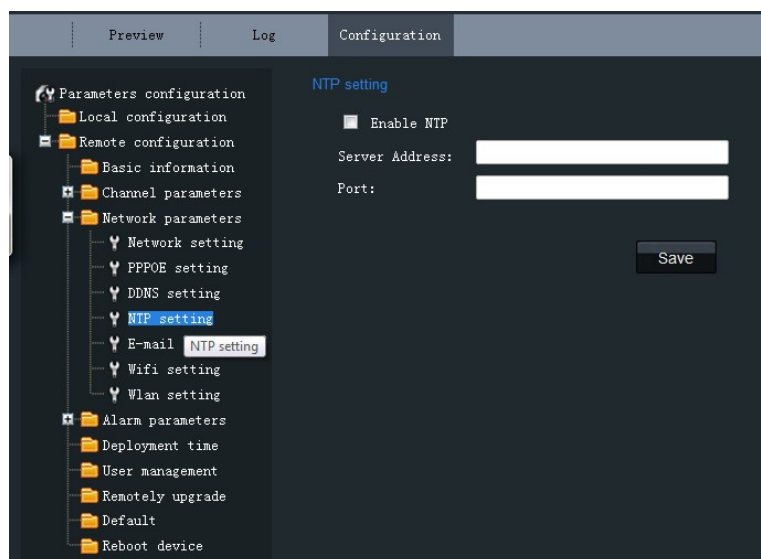


Fig.4.1.17 NTP Settings

### Network Parameters → E-mail Setting:

Through E-mail settings, the alarm message can be sent to the designated E-mail address when alarm event occurs. Input the SMTP server, SMTP port, user name, password, E-mail sender and receiver, JPEG can be attached in this mail by activating Attachment option, and finally click *Save* to finish E-mail settings.

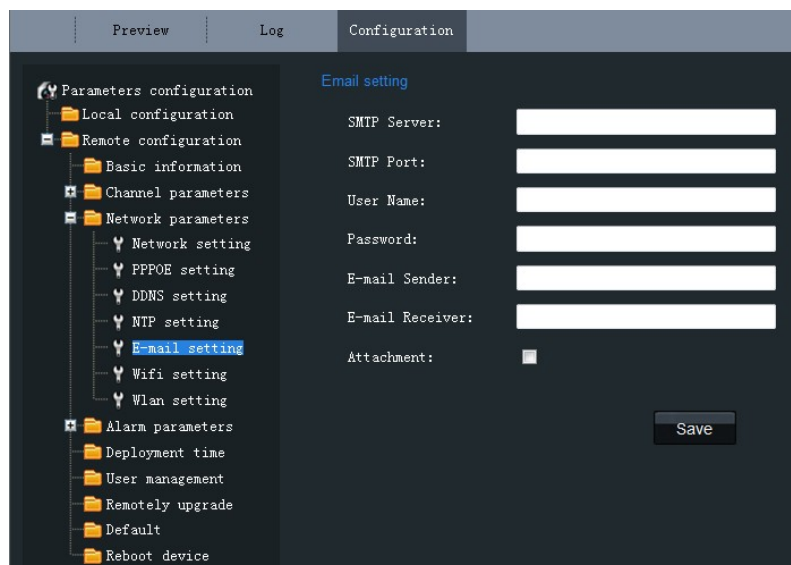


Fig. 4.1.18 E-mail Settings

### Network Parameters → Wifi Setting and Wlan Setting

Before configuring the wireless network camera, please set the wireless router first. For more details about wireless router configuration, please refer to the wireless router configuration instructions.

There are two network interface cards in the camera: wired network interface card and wireless network interface card. The factory default settings of wired network interface card are IP address: 192.0.0.64, port number: 8000, superuser: admin, superuser password: 12345, while the default IP address of wireless network interface card is 192.168.1.64. Before accessing to the wireless network camera through wireless network, use the wired Ethernet port of the wireless network camera to configure parameters of wireless network interface card.

Select "Network Parameters"-> "WiFi Settings" to enter the WiFi settings interface, as shown in figure 4.1.19.

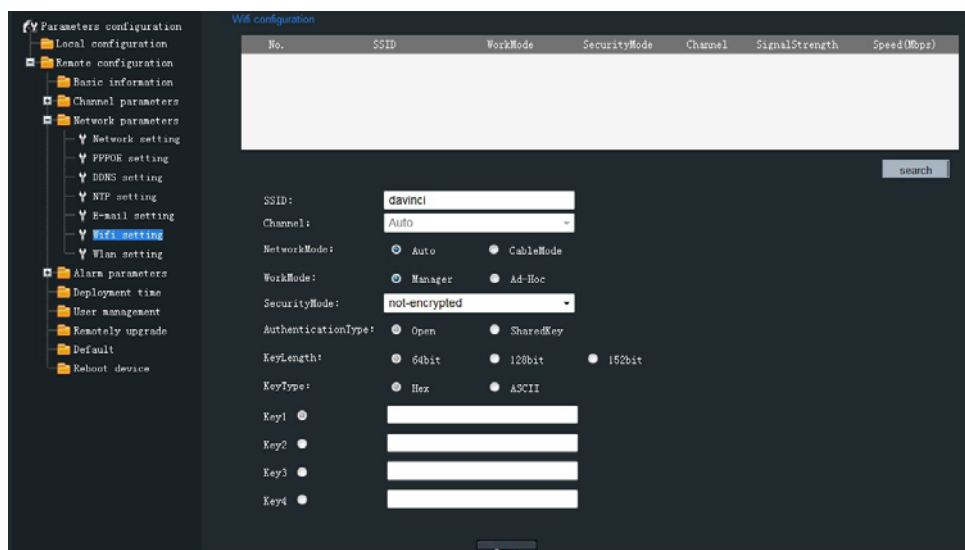


Fig. 4.1.19 WiFi Settings Interface



In the WiFi settings interface, if user select Ad-Hoc mode as the operating mode, please set the PC's wireless IP address in the same network segment as the IP address of wireless network camera. Select "View Wireless Networks" in the computer's "Wireless Network Connection". Find the device which has the same name as the SSID number of the wireless camera. Then point-to-point communication through wireless network is established successfully. So, there is no need to use an Access Point (AP) between the PC and wireless network camera.

If users need to enable encryption, select the appropriate encryption type and set the corresponding encryption parameters.

Select "Network Parameters"-> "Wlan Settings" to enter the Wlan settings interface, as shown in Fig. 4.1.20.

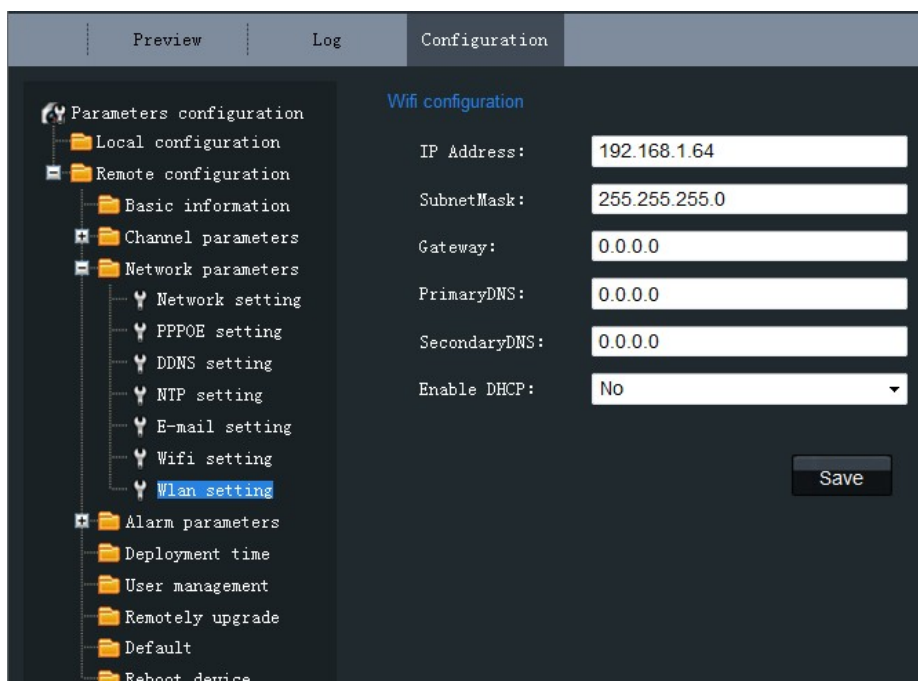


Fig. 4.1.20 Wlan Settings Interface

In the "Wlan settings" interface, user can set the wireless network camera's parameters like wireless IP address, subnet mask, gateway and DNS server address, etc. Unplug the network cable from wireless network camera. The wireless network camera now can be accessed through wireless network after the related network parameters have been set. The way that accesses to wireless network camera through wireless network is similar to cable network.

### Alarm Parameters → Alarm Input Setting:

Set the type of *Relay Status* to NC or NO.

The *Linkage* method can be selected to *E-mail link* or *Trigger alarm output*.

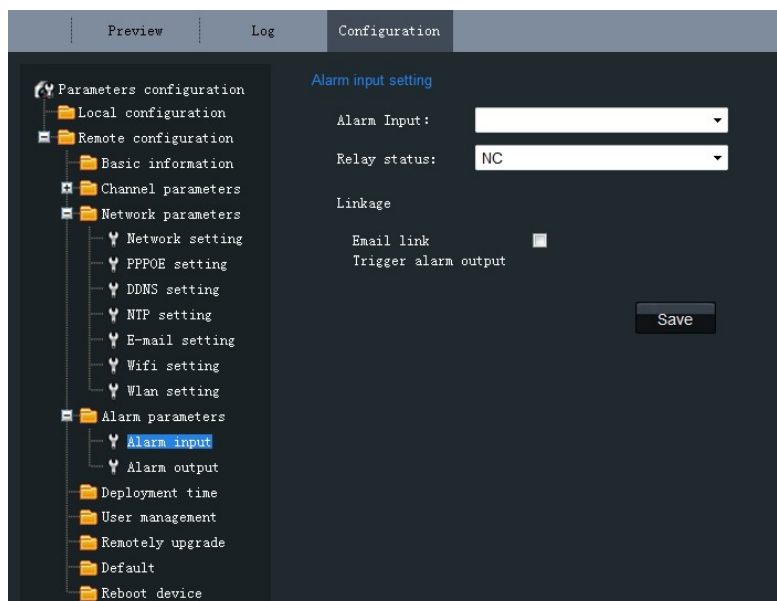


Fig. 4.1.21 Alarm Input Settings

### Alarm Output → Alarm Output Setting:

The *Output Delay* refers to the length of time that the relay remains in effect after alarm occurs. The output delay time can be set to *5sec*, *10sec*, *30sec*, *1min*, *2min*, *5min*, *10min* or *Manual* (manually disable).

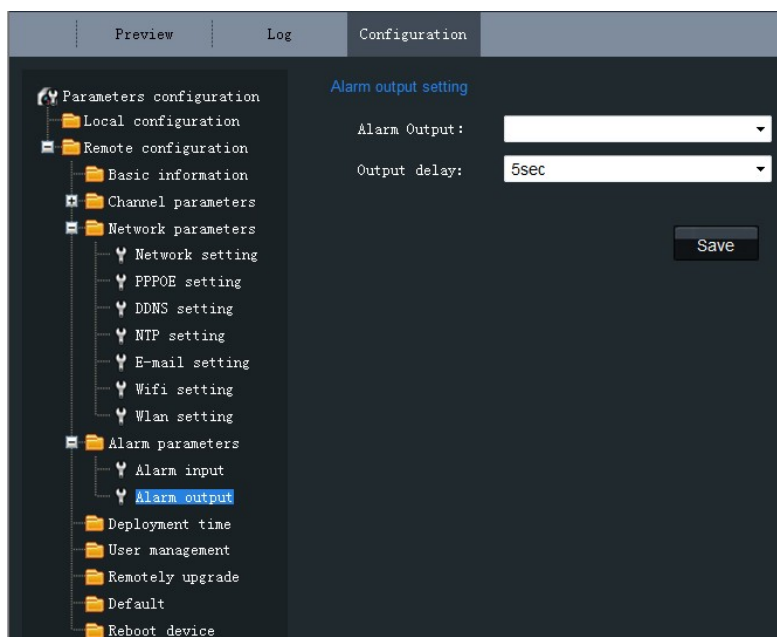


Fig. 4.1.22 Alarm Output Delay Settings

### Alarm Deployment Time:

The *Deployment time* can be set to a day of the week or to all week, with a period configurable for each day.

**Note:** The alarm deployment time setting is valid only when the camera has already been configured with the motion detection, alarm input and alarm output functions.

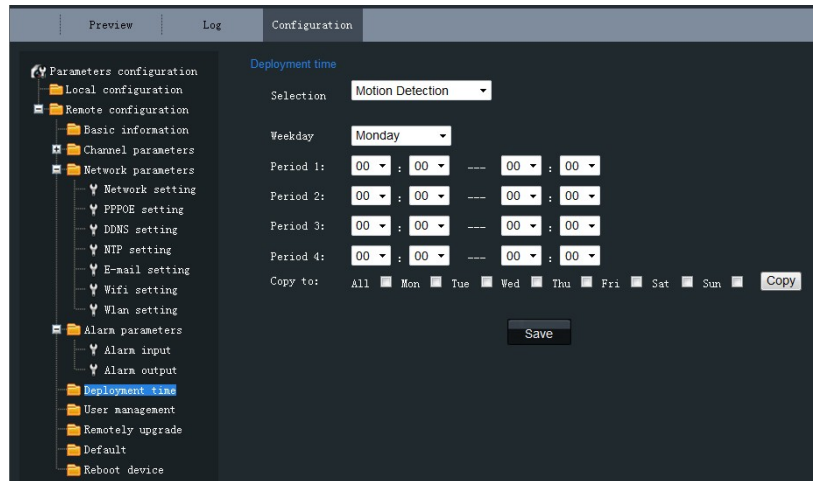


Fig. 4.1.23 Alarm Deployment Time Settings

### User Management:

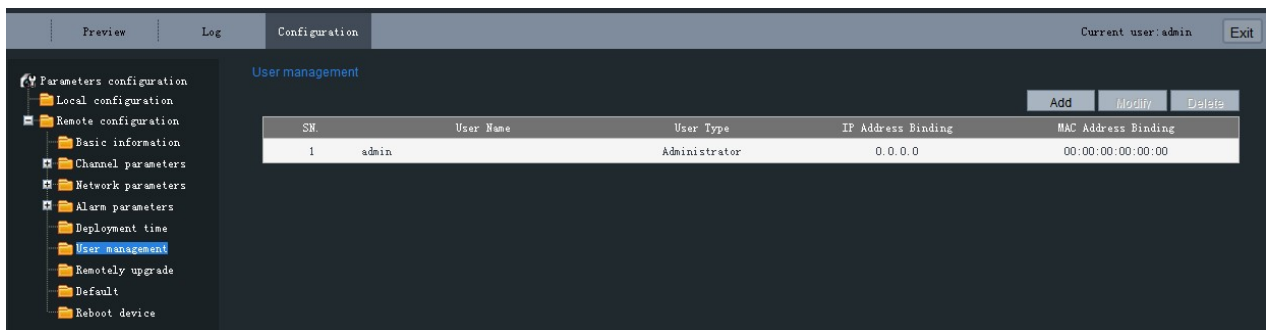


Fig. 4.1.24 User Management

When the current login user is *admin*, it is allowed to create other users. Up to 15 users can be created. Refer to Fig. 4.1.24.

### Add User:

Click *Add* to enter the settings interface as shown in Fig. 4.1.25. Input the user name, password, IP address, MAC address, and then select user type. Finally, click *OK* to finish the user addition.

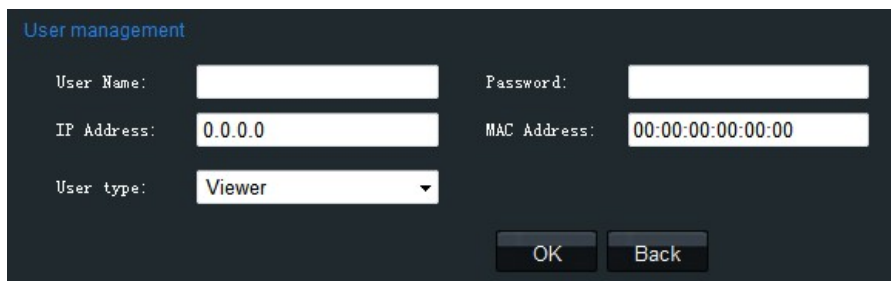


Fig. 4.1.25 Add User

**Modify User:**

Click *Modify* to enter the settings interface as shown in Fig. 4.1.26.

It is allowed to modify the user name, password, IP address, MAC address, and then select user type. Finally, click *OK* to finish the user modification.

**Note:** The user *admin* can only be modified with its password.

Fig. 4.1.26 Modify User

**Remote Upgrade:**

Click *Browse* to select the local update file and then click *Upgrade* to finish remote upgrade.

Fig. 4.1.27 Remote Upgrade

**Restore Default:**

Select *Full Mode* or *Basic Mode* to restore the default settings.

**Note:**

The *Full Mode* refers to restore all parameters to the factory default settings.

The *Basic Mode* refers to restore the parameters to factory default settings except IP address, subnet

Fig. 4.1.28 Restore Default

**Reboot Device:**

Click **OK** to reboot the network camera.

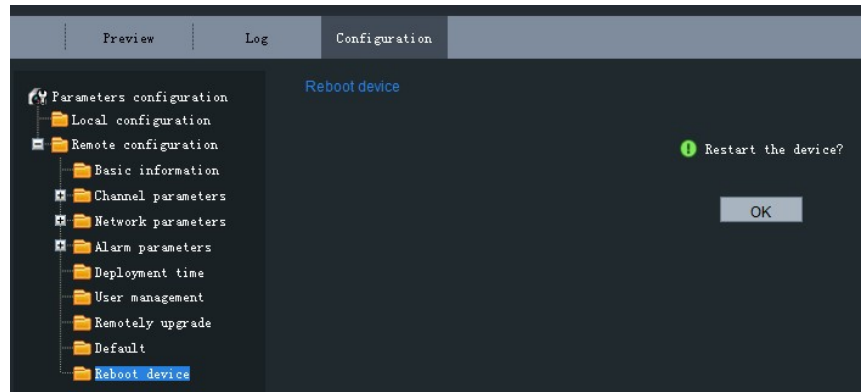


Fig. 4.1.29 Reboot Device

### 4.1.2.3 Advanced Configuration

**Note:** This chapter is applicable to professional configuration.

**1:** Input the IP address of the network camera and “config” (Such as <http://171.9.9.77/config>), and then click [Enter].

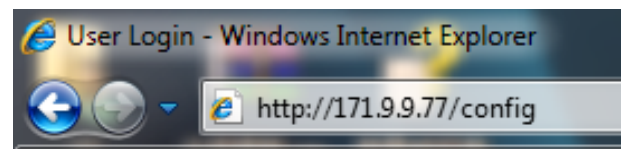


Fig.4.1.30 Advanced Configuration

**2:** Type the *Username* (default: admin), *Password* (default: 12345) and *Port* (default: 8000) of the camera, and then click [Login].

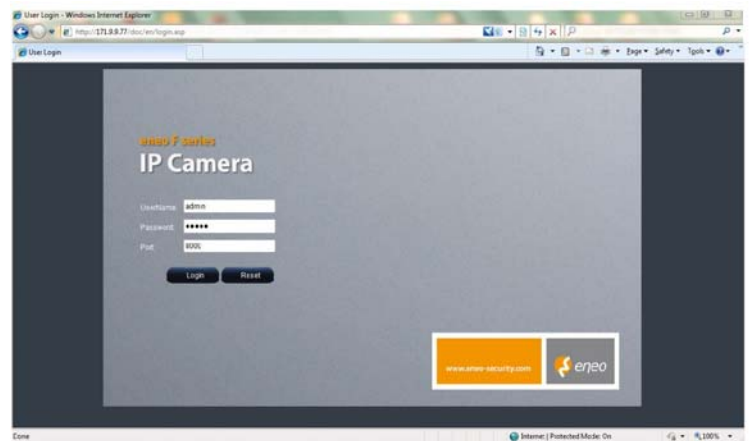


Fig.4.1.31 Advanced Configuration login



## 4.2 Access over Client Software

### 4.2.1 Client Software Installation

**Note:**

It is recommended to use the computer adopting INTEL P3, P4, C4, Core4 CPU, and the Intel chipset motherboard of well-known brands (Asus, Gigabyte, MSI, ECS, and INTEL etc.) to ensure the stability of the system. After testing, the following models of the current graphics cards support the installation of the client software: ATIRadeonX1650, X1600, X1550, X1300, X800, X600, X550, HD2400, HD2600, NVIDIA GeForce 8600GT, 8500GT, 8400GS, 7600, 7300LE, 6600LE, 6200LE, and INTEL915/945G. And the graphics driver must support hardware scaling function.

**Step 1:**

Double click 'eneo FINITRA.exe' in the Windows Operating System. The 'Preparing Setup' dialog box will automatically pop up as shown Fig.2.2.1.

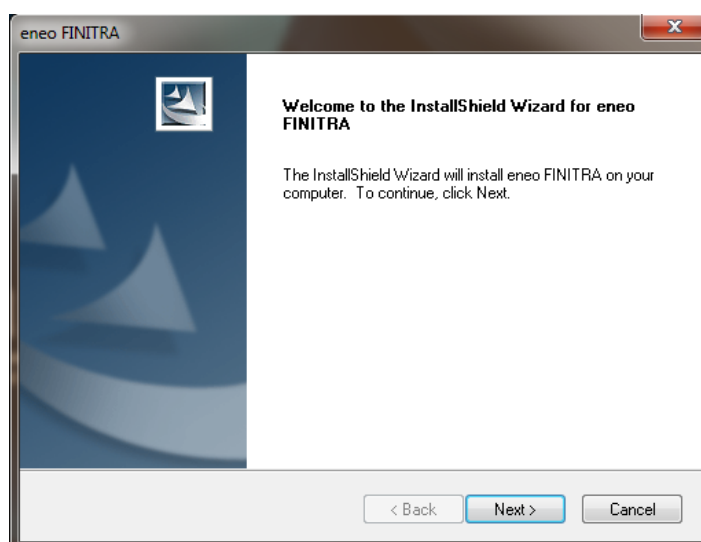


Fig. 4.2.1 Client Software Installation

**Step 2:**

Input the User Name and Company Name, and then click *Next*.

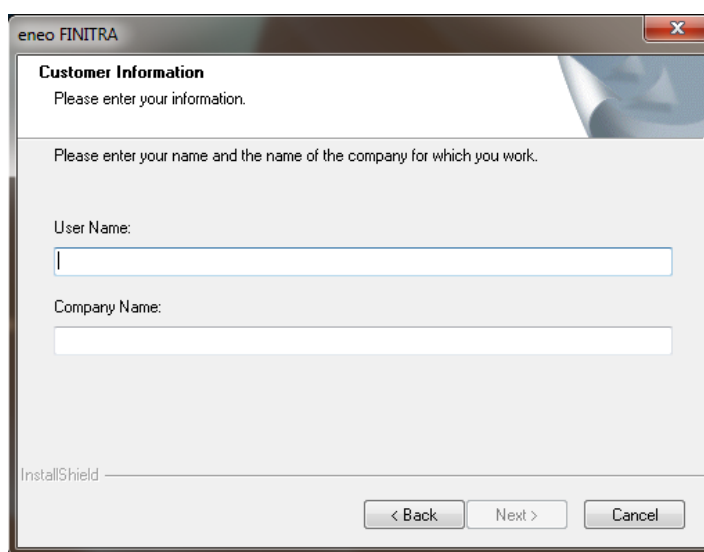


Fig.4.2.2 Customer Information

**Step 3:**

Select the destination folder and click *Next* to enter the next step.

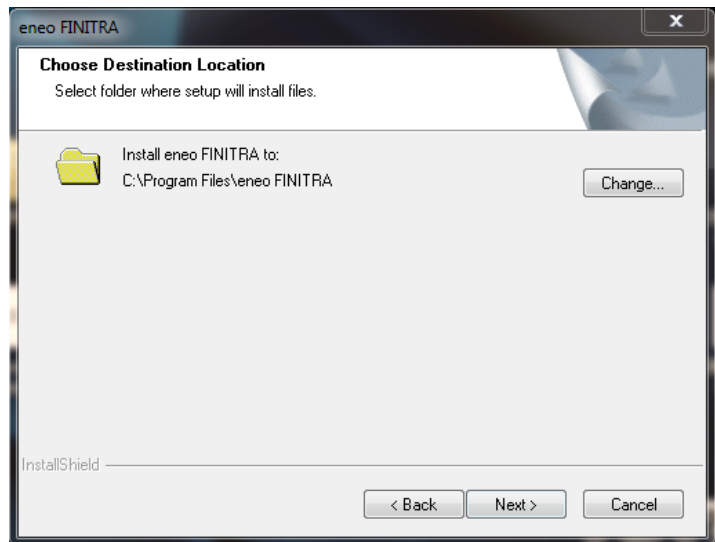


Fig. 4.2.3 Ready to Install the Program

**Step 4:**

Click *Install* to start installation till finishing the installation.

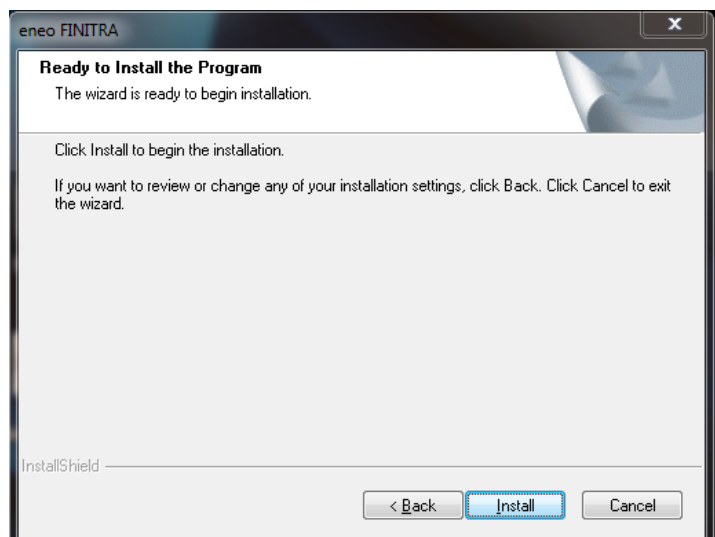


Fig. 4.2.4 Installation

**Step 5:**

Click *Finish* to close the dialog box.

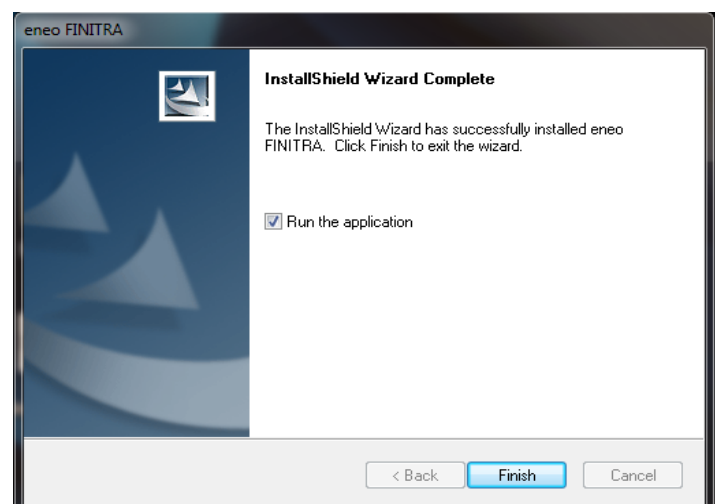


Fig. 4.2.5 Done



After the client software has been installed, you can find the remote client software through Start-> Programs from your PC.

## 4.2.2 Live View

After the installation of eneo FINITRA, there is a short-cut icon named “eneo FINITRA” on computer’s desktop. Please double click “eneo FINITRA” to run the software.

### Step 1:

Used for the first time:

User needs to register an *administrator* if the software is used for the first time.

Input *User name*, *Password*, *Verification*, and click *OK*, then user can log in as the administrator.

A dialog box titled "Register administrator" with a close button (X) in the top right corner. The main text reads "Please create an administrator for login!". Below this, there are three input fields: "User name:", "Password:", and "Verification:". At the bottom, there are two buttons: "OK" and "Cancel".

Fig. 4.2.6 Register Administrator

### User login:

Input *User*, *Password* and click *Login* to enter the GUI window of the software.

A dialog box titled "User Login" with a close button (X) in the top right corner. It contains a "User" field with a dropdown arrow, a "Password" field with a key icon, and an "Automatic Login" checkbox. At the bottom, there are three buttons: "Modify", "Login", and "Quit".

Fig. 4.2.7 User Login

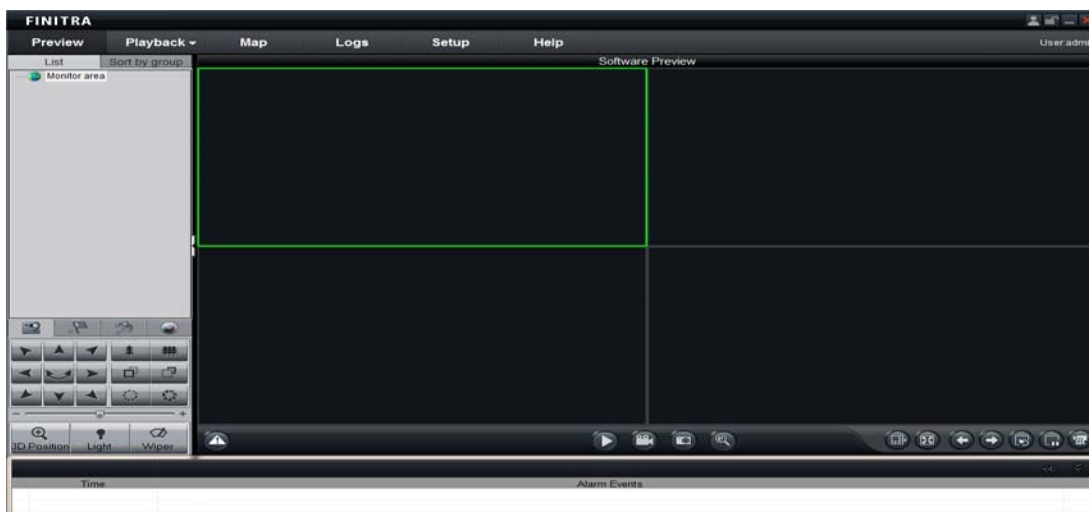


Fig. 4.2.8 GUI window of the software

**Step 2:**

Click *Setup* to enter the configure mode, and then click *Device Management*.

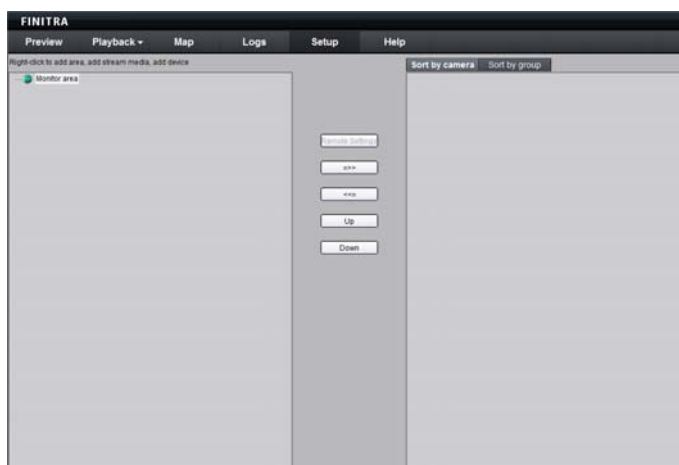


Fig. 4.2.9 Device Management

**Step 3:**

Right click the left area, and then click *Add Area*.

Input *Area Name* for your need, and then click *OK* to add area.



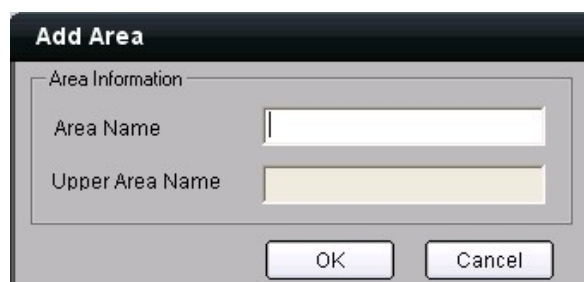


Fig. 4.2.10 Add Area

**Step 4:**

Right click the area that you add, and then click *Add Device* to add network camera.

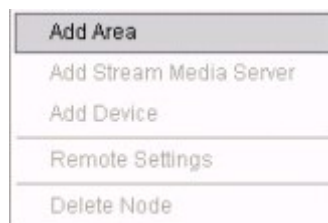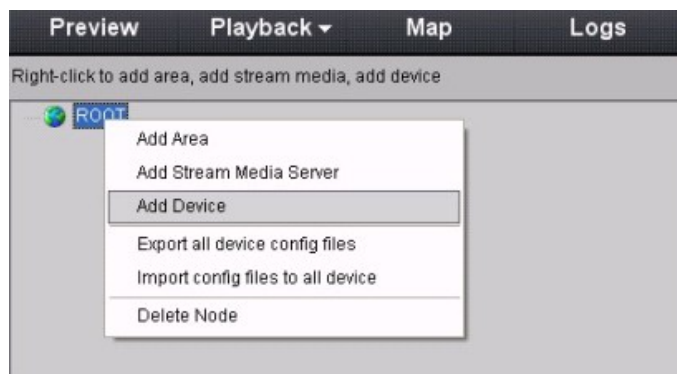

Input "Device Name" for your need. Select "Normal IP" from Register Mode. Input network camera's IP in *Device IP*, e.g. 192.0.0.64, *Port*: 8000, *User Name*: admin, *Password*: 12345.

Enter the number of cameras in "Channel No." field, e.g. enter 4 for FNR-4004 NVR. "Multicast Address" is optional and used for media broadcasting (D type IP address). Finally, click *OK* to finish settings.

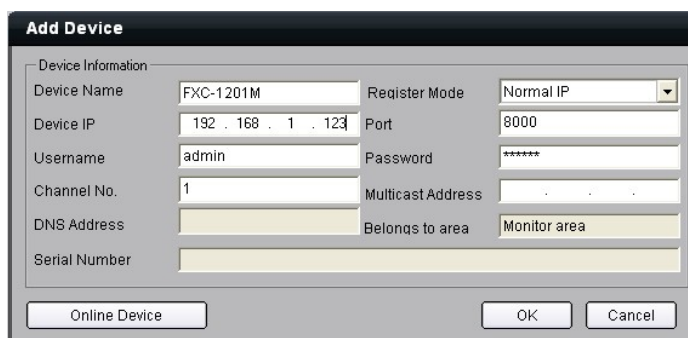


Fig. 4.2.11 Add Device

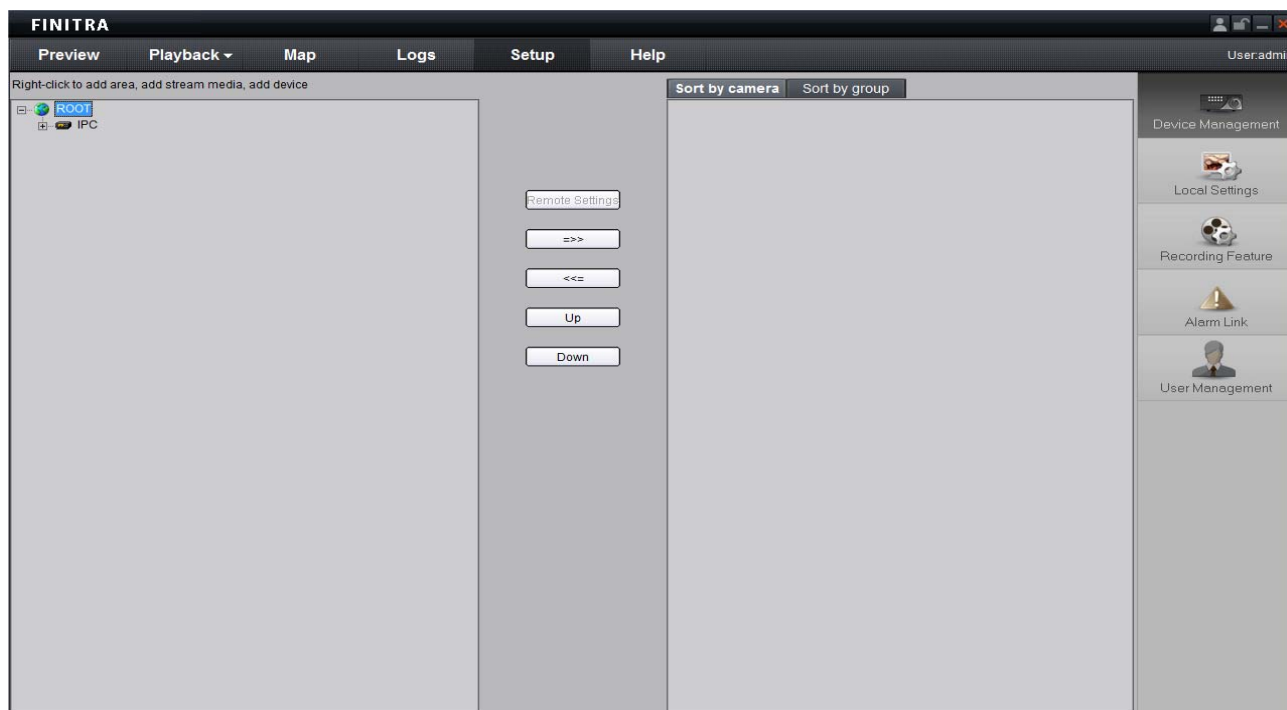


Fig. 4.2.12 Camera Adding Completed

**Step 5:** Click the *Preview*, and then double click the device name in the left tree to view the live video.

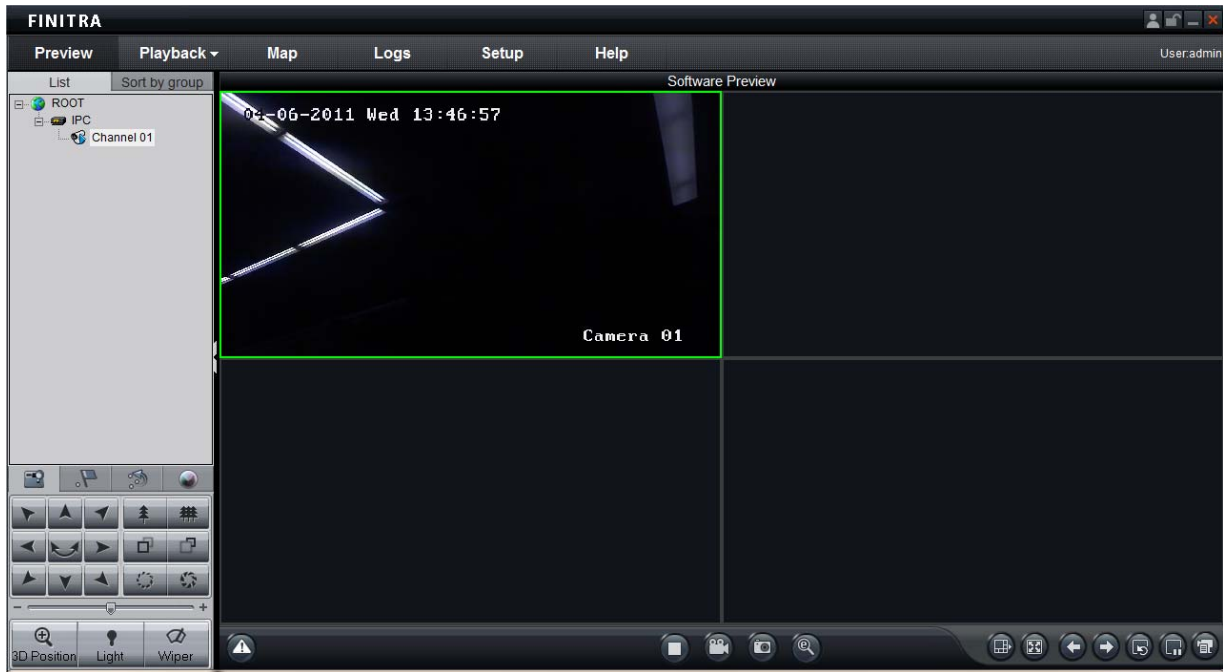


Fig. 4.2.13 Preview

### 4.2.3 Camera Parameters Configuration

#### NOTE:

Different types of network cameras maybe have different configuration parameters in the interface of “Config Sensor Parameters”. This section takes a type of network camera for example to introduce configuration parameters in the interface of “Config Sensor Parameters”. If the information in the actual interface of “Config Sensor Parameters” is not different from the information shown in this section, then subject to the actual interface information.

For viewing better image, you can set the parameters of the camera, and operate as following:

#### Step 1:

Right click in the preview window, and click [Config Sensor Parameters...], then the [Config Sensor Parameters...] box will pop up.



Fig. 4.2.14 Sensor Parameters

**Step 2: Video Parameters Configuration**

Adjust the value of “Brightness”, “Contrast”, “Saturation”, “Hue”, “Sharpness” and “Gain” for your need, which can be set from 1 to 100.

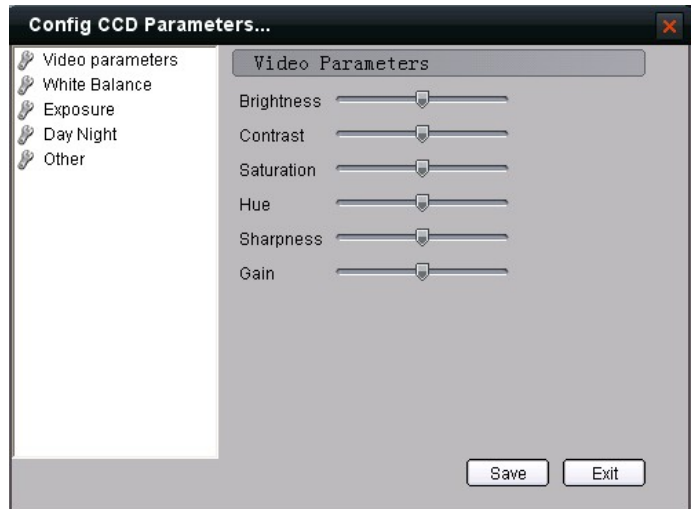


Fig. 4.2.15 Video Parameters

**Step 3: White Balance Configuration**

Select the mode to *Auto1* or *Off* for your need.

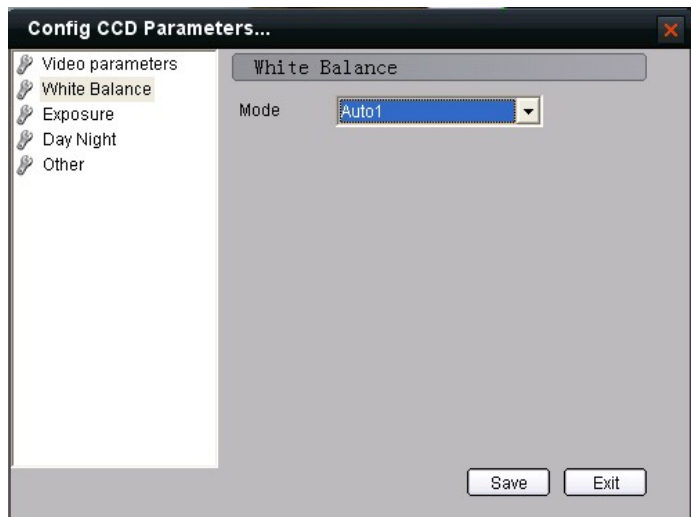


Fig. 4.2.16 White Balance

**Step 4: Exposure Configuration**

Select “Exposure time” and “Iris mode” for your need.

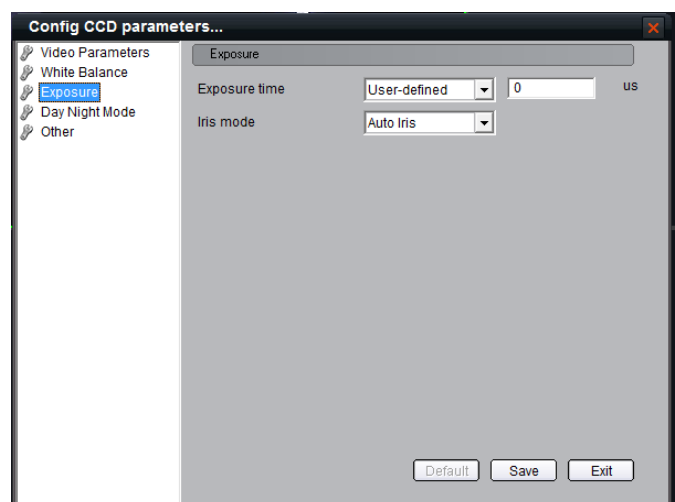


Fig. 4.2.17 Exposure

**Step 5: Day/Night Mode Configuration**

Select “Day”, “Night” or “Auto” mode in *Mode* and adjust the value of “Day->Night”, “Night->Day”, and “Filter time” for your need.

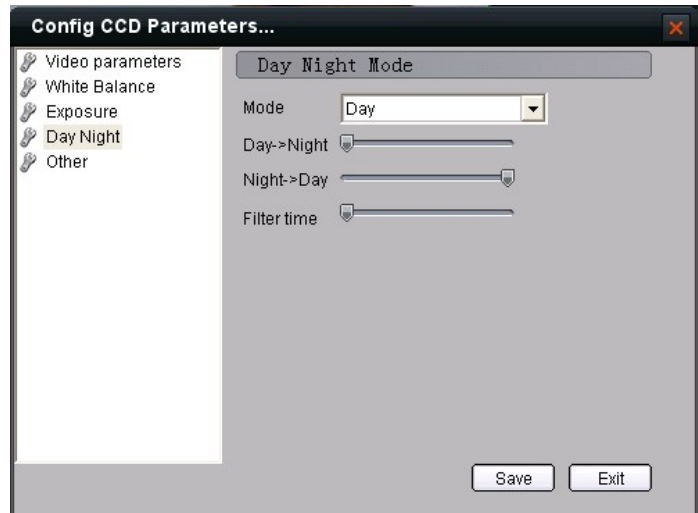


Fig. 4.2.18 Day/ Night Mode

**Step 6: Other Parameters Configuration**

Select the value of “Power Line”, “Mirror”, “E-PTZ” and “Local Output”.

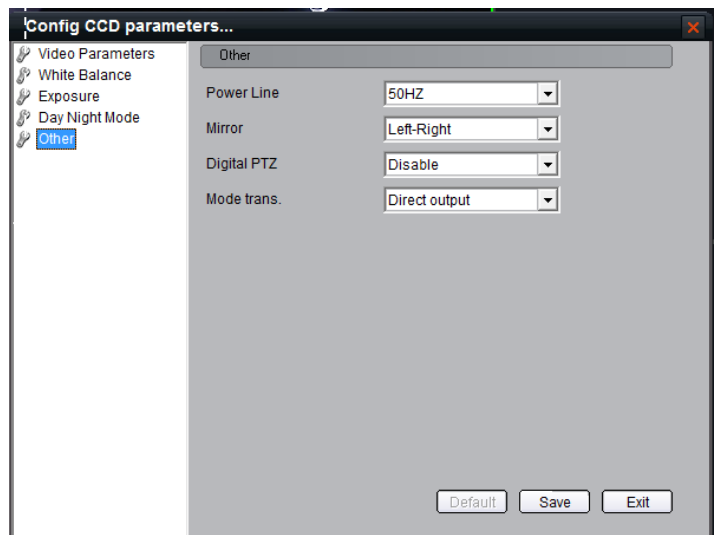


Fig. 4.2.19 Other Parameters

Please refer to “FINITRA\_en\_93172.pdf” for more detailed parameters configuration. You can find the document in the PC Operating System after the installation of eneo FINITRA by selecting “Start”-> “All Programs”-> “eneo FINITRA”-> “eneo FINITRA.exe”.

## Chapter 5 Access over Internet

### 5.1 Access network camera with static IP

When there is a static IP from an ISP, open some ports (such as 80 and 8000 ports) in the router. Then a user can visit it through a web browser or client software via the internet. The steps for port forwarding are different for each model of router. Please call the router manufacturer for assistance with port forwarding or visit [www.portforward.com](http://www.portforward.com).

**Note:** Refer to Appendix 2 for a detailed explanation about Port Map.

Users can directly connect the network camera to the internet without using a router.

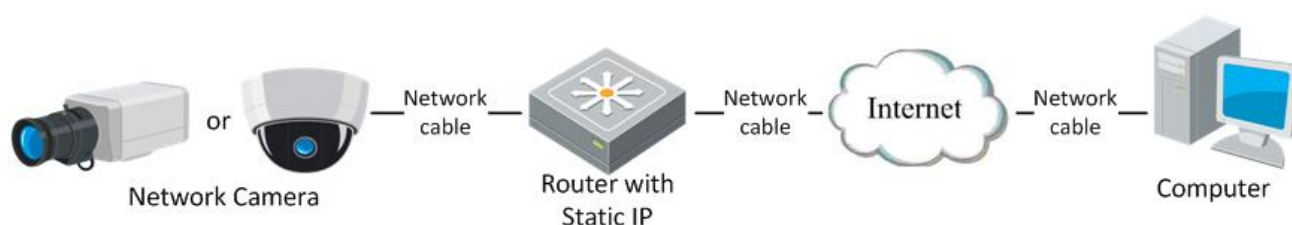


Fig. 5.1 Access IPC through Router with Static IP

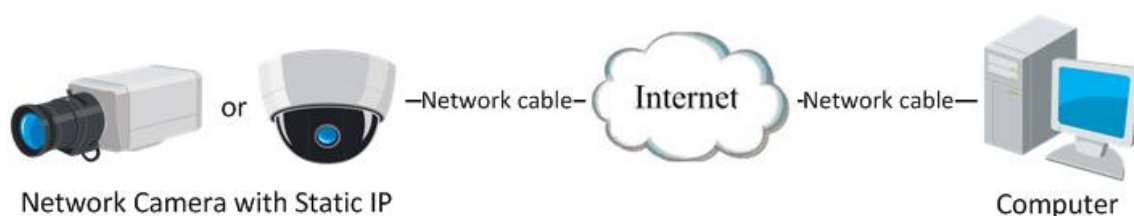


Fig.5. 2 Access IPC with Static IP directly

For the client software to view the camera, in the adding equipment column, select the normal model, and then fill in the IP info.

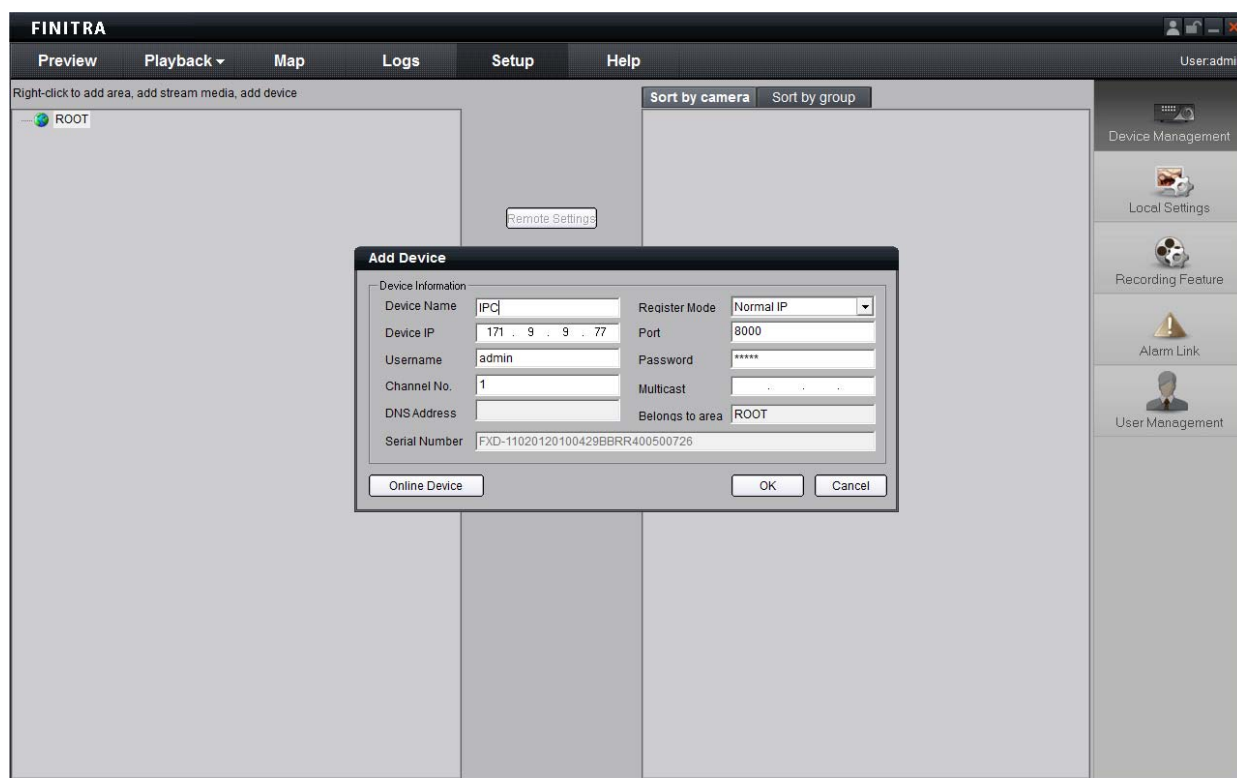


Fig. 5.3 Selecting Normal IP

## 5.2 Access network camera with dynamic IP

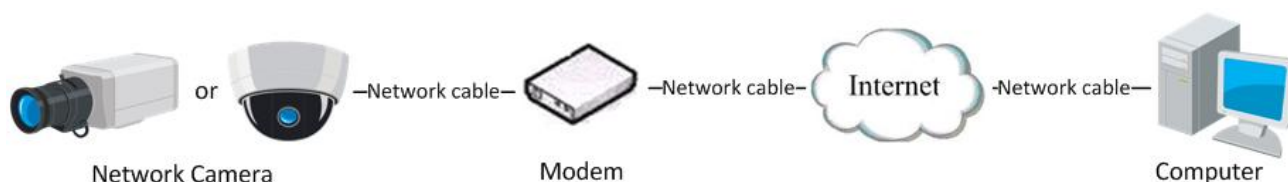


Fig. 5.4 Access IPC through PPPoE Dial-up

This camera supports the PPPoE auto dial-up function, connecting the camera to a Modem for dial-up access to an ADSL network to get a public IP address; First, through local network access to the network camera, select “Configure” → “Right Click the Device”, “Remote Configuration”, and finally select “PPPoE Settings” under “Network Parameters” to fill in the PPPoE user name and password and confirm the password. Please restart the network camera after completion of configuration. Then the network camera can obtain a dynamic IP from an ISP operation business. However, the obtained IP address is dynamically assigned via PPPoE, so the IP address always changes accompanied with modem rebooting.



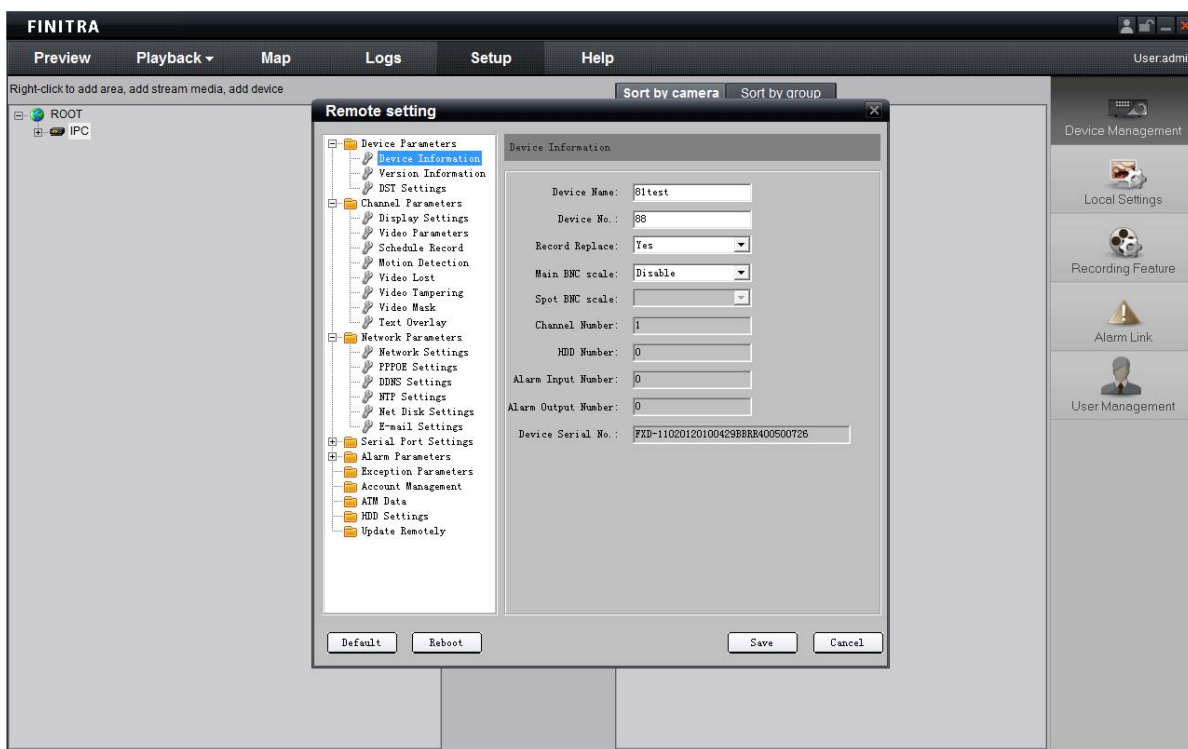


Fig. 5.5 PPPoE configuration Dialog box

It is inconvenient to view a network camera with a dynamic IP, therefore, users should register with a dynamic DNS service provider. (Such as DynDns.com)

Domain name resolution contains normal domain name resolution and private domain name resolution. First, we will introduce normal domain name resolution.

### 1. Normal Domain Name Resolution

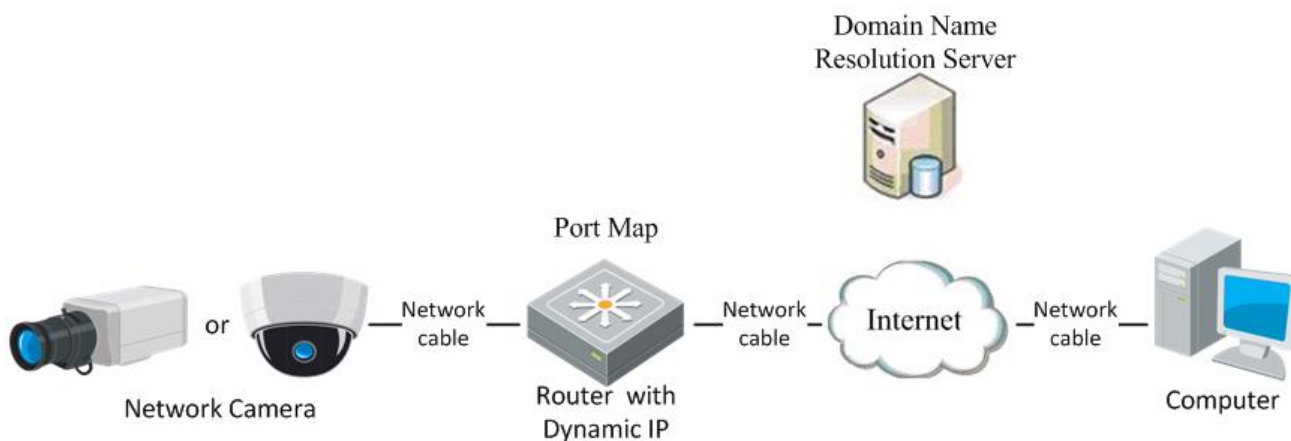


Fig. 5.6 Normal Domain Name Resolution

Apply a domain name from a domain name provider, then view the camera via the applied domain name. If the camera connects to the internet via a router, users should port forward the router. Please refer to Appendix 2.

Input domain names in the client software or IE to view the network cameras. Take the client software configuration as an example.

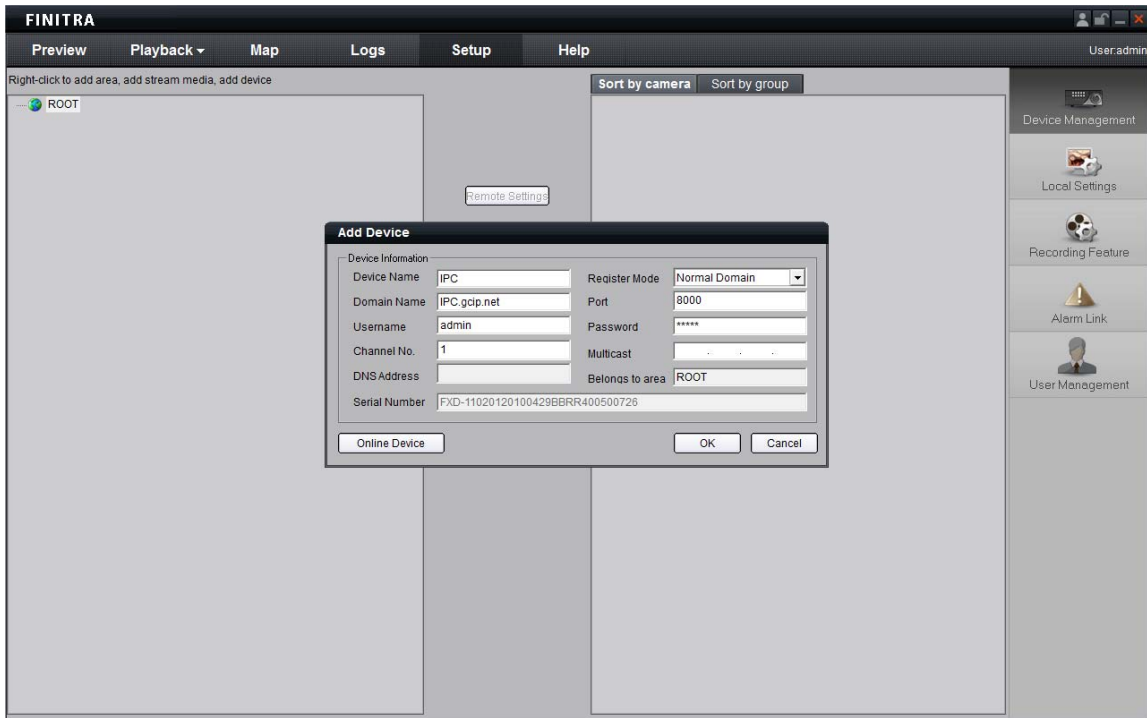


Fig. 5.7 Selecting Normal Domain Mode

## 2. Private Domain Name Resolution

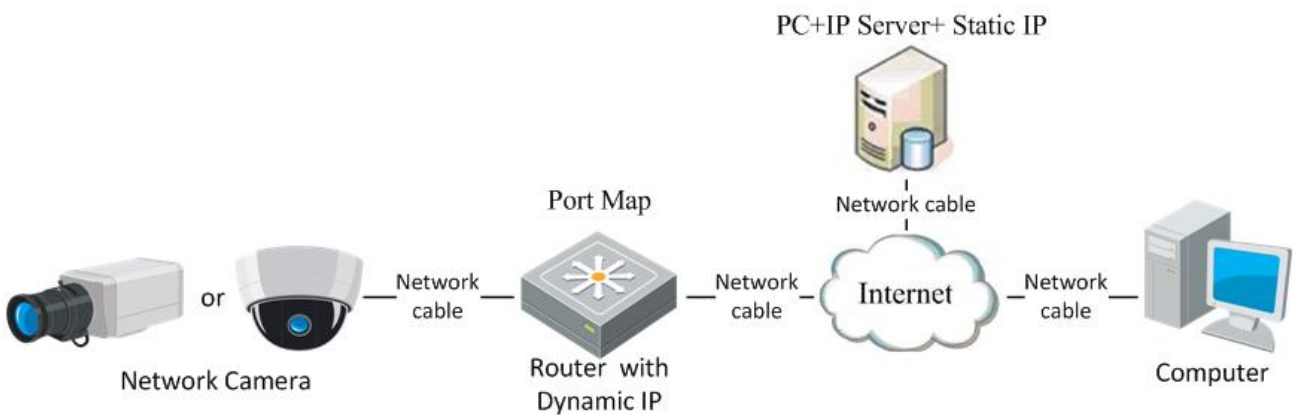


Fig. 5.8 Private Domain Name Resolution

A PC with a static IP which is running the domain name resolution service is necessary. When the network camera connects to the internet through PPPoE and obtains an IP address, it will send its name and IP address to the resolution server. When the client software connects to the network camera, it will connect to the resolution server and tell the resolution server the expected camera's name. And the server will find the camera from all the registered cameras and send its IP address to the client software. Once the client software gets the IP address, it can connect the network camera.

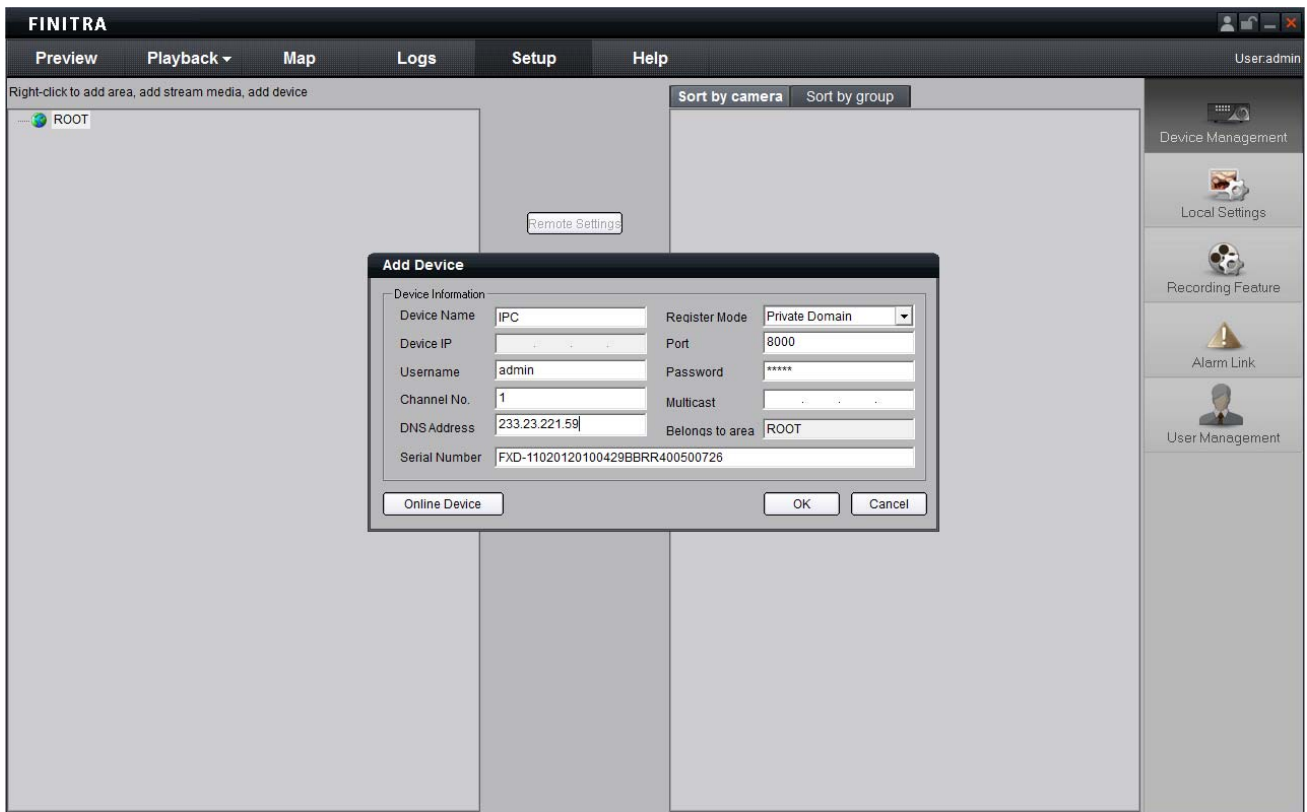


Fig. 5.9 Selecting Private Domain Mode

## Chapter 6 Specifications and Drawings

### 6.1 Specifications


Type	FXC-1302/W
Art. No.	92714
Series	eneo F
Resolution standard	HD 720p
System	Day & night
Sensor size	1/3"
Imager	CMOS
Sensitivity (at 50% video signal)	0,5 Lux, at F1.2
Horizontal resolution	n/a TVL
Digital Noise Reduction (DNR)	no
Low speed shutter	yes, 1/25sec. - 1/100,000sec.
Backlight compensation	no
Wide Dynamic Range (WDR)	no
IR cut filter	OLPF (Overlay Low Pass Filter)
Privacy zones masking	4 areas selectable
Motion detector	integrated
Activity detection	yes
Text display	supplied
Menu languages	English, Chinese
Audio support	yes
Audio	Built-in microphone, speaker
Alarm inputs	-
Alarm outputs	-
Internal storage	Micro SD card
Compression standard	H.264, MJPEG
Resolution max.	1600 x 1200
Resolution	2 megapixels
Image transmission rate max.	30 pictures/sec.
Ethernet interface	100Base-TX, Wireless LAN (IEEE 802.11)
Web browser	MS Internet Explorer vers. 7.0 min.
Network protocols	TCP/IP, HTTP, DHCP, DNS, DDNS, RTP, RTCP, PPPoE, FTP, SMTP, NTP, SNMP, HTTPS, SIP, IPv4, IPv6
Stream types	H.264, MJPEG multiple
Lens type	fixed focal length

<b>Lens mount</b>	CS/C mount
<b>Focal length</b>	4 mm
<b>Digital zoom</b>	no
<b>Recording</b>	permanent, movement, timer
<b>Serial interfaces</b>	no
<b>Remote configuration</b>	via web browser, remote software
<b>Password protection</b>	yes
<b>PTZ support</b>	yes
<b>Supply voltage</b>	12VDC, PoE (IEEE-802.3af)
<b>Power over Ethernet</b>	yes
<b>Power consumption</b>	3 W
<b>Temperature range (operation)</b>	-10°C - +60°C
<b>Colour (housing)</b>	RAL9010
<b>Housing material</b>	plastic
<b>Protection rating</b>	n/a
<b>Integrated wall mount</b>	yes
<b>Hidden cable management</b>	no
<b>Sunshield</b>	no
<b>Window heater</b>	no, -
<b>Vandalism resistant</b>	no
<b>Management Software Support</b>	Finitra, Zelarix
<b>SDK</b>	available, SDK incl. HTTP-API and ActiveX
<b>ONVIF</b>	core specifications 1.02
<b>Dimensions (HxWxD)</b>	110x70x33 mm
<b>Weight</b>	250 g
<b>Parts supplied</b>	lens

### Optional Accessories

The optional accessories currently available can be found on our Homepages: [www.videor.com](http://www.videor.com) and [www.eneo-security.com](http://www.eneo-security.com)

### 6.1 Dimensional Drawings

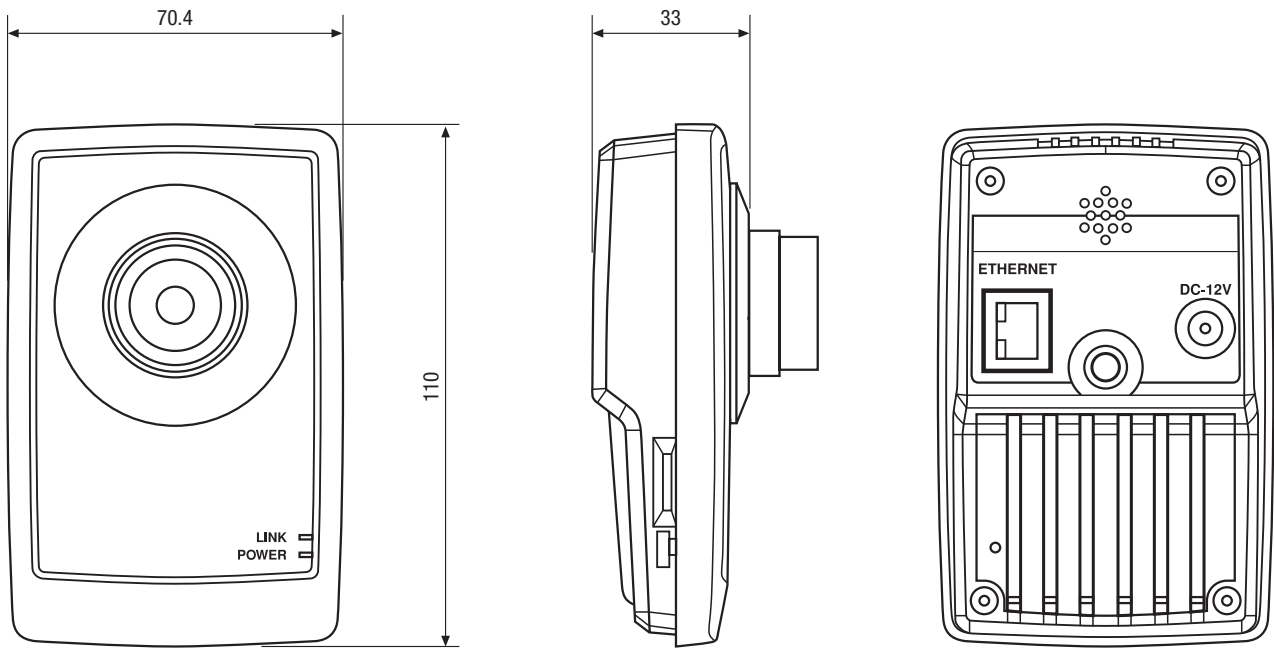

Dimensions: mm

# Appendix 1 SADP Introduction


## 1. Brief introduction

SADP (Search Active Devices Protocol) is a kind of software which can automatically search network speed dome in LAN. User can modify the IP address, subnet mask and port of the device without visiting IP address of the device. Additionally, password of the super user in this device can be recovered as default.

SADP software needs to support SADP, so we should install WinPcap at first, which is placed at the directory of SADP software.

## 2. Search active devices online


After installing WinPcap, double click sadpdlg.exe. The software will start to search active devices in LAN, and device type, IP address, Port number, Device Serial No., subnet mask, MAC address, the number of channels, main control and encoding version and device initiating time are showed in the list, as following:

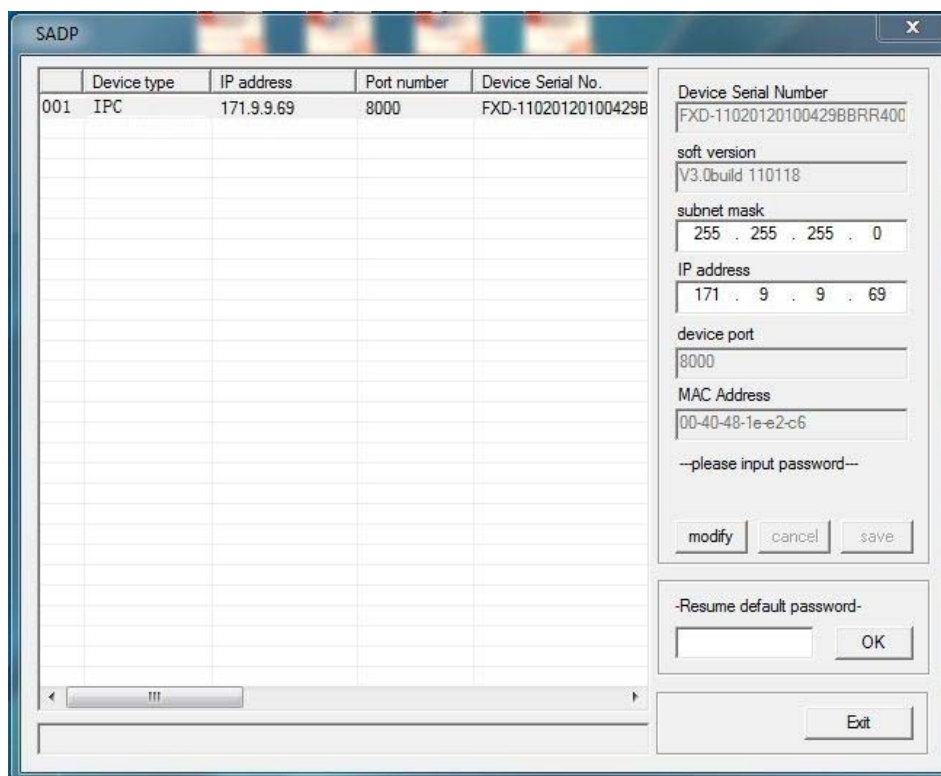

### 3. Modify device information

Select the device that needs modification in the device list, then basic information of the device will be demonstrated in the information column on the right. Click “modify” button to activate IP address, subnet mask, device port editing and password validating box, as follows:

Select the device that needs modification in the device list, then basic information of the device will be demonstrated in the information column on the right. Click “modify” button to activate IP address, subnet mask, device port editing and password validating box, as following:

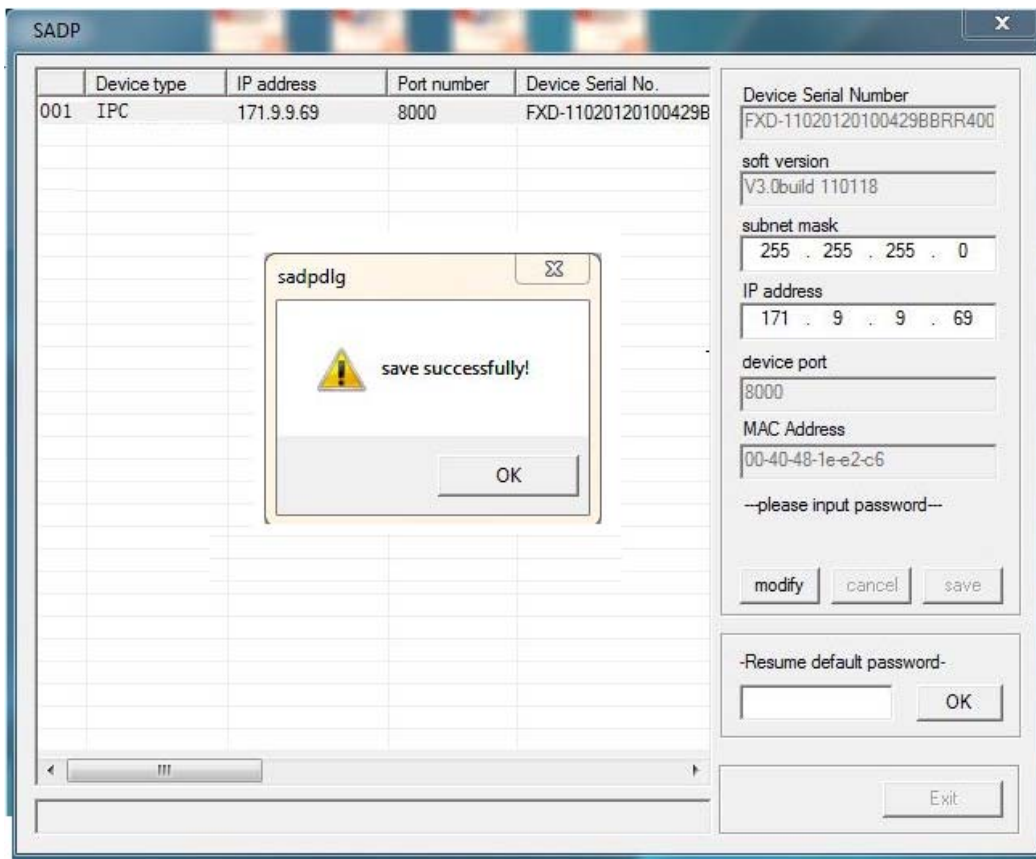

Input new IP address, subnet mask, and port number, and click “save” button. If a dialog pops up, showing “saved successfully”, that means you have modified the configuration information; if “saving failed” turns up, click the “cancel” button to quit it.

### 4. Recover default password

You can reset the password of the super user as “12345” in the case of a lost password. Input certain validation code into the ‘Resume default password’ box, and click ‘OK’ to finish the administrator’s password initiating.



## Appendix 2 Port Map

**Note:** The following setting is about TP-LINK router (TL-R410), which is maybe distinct from other router's setting.

1. Firstly, select the router's WAN connection Type. As the following Fig. shows:

**108M Wireless Router**  
Model No.:  
TL-WR641G / TL-WR642G

- Status
- Quick Setup
- Basic Settings ---
- Network
  - LAN
  - WAN
  - MAC Clone

### WAN

WAN Connection Type:

User Name:

Password:

Dynamic IP  
Static IP  
PPPoE  
802.1X + Dynamic IP  
802.1X + Static IP  
BigPond Cable  
L2TP

2. Set the “network parameter” of the router as the below figure. The setting includes subnet mask and gateway.

**108M Wireless Router**  
Model No.:  
TL-WR641G / TL-WR642G

- Status
- Quick Setup
- Basic Settings ---
- Network
  - LAN
  - WAN
  - MAC Clone

### LAN

MAC Address: 00-14-78-6A-DB-0C

IP Address:

Subnet Mask:

Save

3. Set the port map in the virtual servers of Forwarding. By default, camera uses port 80, 8000, 554 and 8200. You can change these ports value with IE or client software.

The following figure gives the illustration. One camera's ports are 80, 8000, 554, 8200 and its IP address is 192.168.1.23. The other camera's ports are 81, 8001, 555, 8201 and IP is 192.168.1.24. Afterwards, enable all or TCP protocols. Enable the port map after pressing the 'Save'.

**108M Wireless Router**  
Model No.: TL-WR641G / TL-WR642G

- Status
- Quick Setup
- Basic Settings ---
- + Network
- + Wireless
- Advanced Settings ---
- + DHCP
- Forwarding
  - Virtual Servers
  - Port Triggering
  - DMZ
  - UPnP
- + Security
  - Static Routing
  - Dynamic DNS
- Maintenance ---
- + System Tools

### Virtual Servers

ID	Service Port	IP Address	Protocol	Enable
1	80	192.168.10.23	ALL	<input checked="" type="checkbox"/>
2	8000	192.168.10.23	ALL	<input checked="" type="checkbox"/>
3	554	192.168.10.23	ALL	<input checked="" type="checkbox"/>
4	8200	192.168.10.23	ALL	<input checked="" type="checkbox"/>
5	81	192.168.10.24	ALL	<input checked="" type="checkbox"/>
6	8001	192.168.10.24	ALL	<input checked="" type="checkbox"/>
7	555	192.168.10.24	ALL	<input checked="" type="checkbox"/>
8	8201	192.168.10.24	ALL	<input checked="" type="checkbox"/>

Common Service Port: DNS(53) Copy to ID 1

Previous Next Clear All Save

As the settings mentioned above, map the router's port 80 and 8000 to the network camera at 192.168.1.23; and port 81 and 8001 to the network camera at 192.168.1.24. In this way, user can access the 192.168.1.23 through accessing the router's port 80 and 8000.


**Note:** The port of the network camera cannot conflict with other ports. For example, some router's web management port is 80. User can amend the router's or the camera's port to solve this problem.

## Appendix 3 Pin Definition

(1) UTP between the network port of camera and HUB (Direct Cable)



(2) UTP between the network port of camera and PC (Cross Cable):

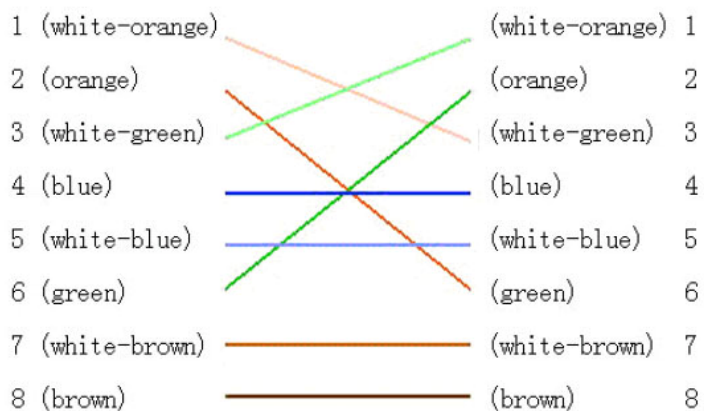



eneo® is a registered trademark of Videor E. Hartig GmbH  
Exclusive distribution through specialised trade channels only.

Videor E. Hartig GmbH  
Carl-Zeiss-Straße 8 · 63322 Rödermark, Germany  
Tel. +49 (0) 6074 / 888-0 · Fax +49 (0) 6074 / 888-100

[www.videor.com](http://www.videor.com)  
[www.eneo-security.com](http://www.eneo-security.com)



Technical changes reserved.  
© Copyright by Videor E. Hartig GmbH 07/2011